



**Owner's manual**  
**Mode d'emploi**  
**Manual de instrucciones**

***DXZ465MP***

**CD/MP3/WMA RECEIVER/CeNET CONTROL**  
**RÉCEPTEUR CD/MP3/WMA/CONTRÔLE CeNET**  
**RECEPTOR CD/MP3/WMA/CONTROL CeNET**

# Contents

1. FEATURES .....	2
2. CONTROLS .....	3
MAIN UNIT .....	3
3. BUTTON TERMINOLOGY .....	4
Names of the Buttons and their Functions .....	4
Major Button Operations when external equipment is connected to this unit .....	5
Display Items .....	7
LCD Screen .....	7
4. PRECAUTIONS .....	8
5. HANDLING COMPACT DISCS .....	9
6. DCP (Detachable Control Panel) .....	10
7. REMOTE CONTROL .....	11
Inserting the Battery .....	11
Functions of Remote Control Unit Buttons .....	12
8. OPERATIONS .....	13
Basic Operations .....	13
Radio Mode Operations .....	15
CD/MP3/WMA Mode Operations .....	17
Operations Common to Each Mode .....	22
9. OPERATIONS OF ACCESSORIES .....	25
CD Changer Operations .....	25
TV Operations .....	26
10. TROUBLESHOOTING .....	28
11. ERROR DISPLAYS .....	30
12. SPECIFICATIONS .....	31


## 1. FEATURES

- Full dot display & Flip-down detachable faceplate
- MP3 and WMA compatible with ID3-TAG display
- “Z-ENHANCER” sound customization & “MAGNA BASS EX” dynamic bass enhancement




## 2. CONTROLS / COMMANDES / CONTROLES

### MAIN UNIT / APPAREIL PRINCIPAL / UNIDAD PRINCIPAL

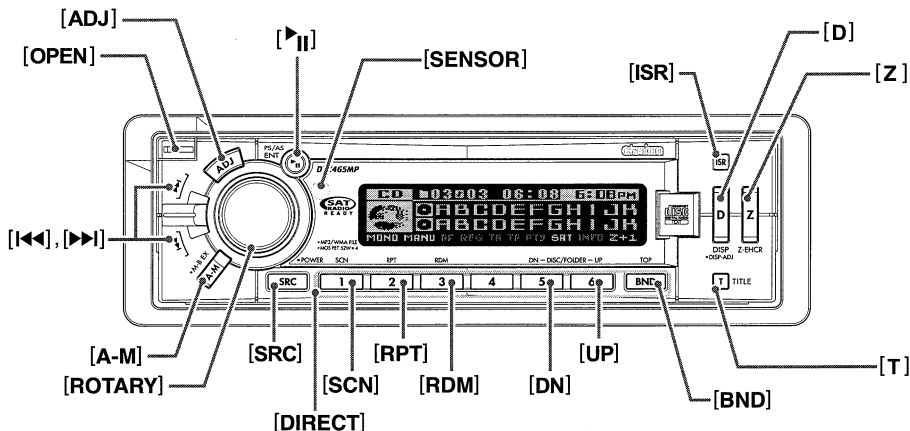

With the FLIP DOWN PANEL opened / Ouvrez le PANNEAU RABATTABLE / Apertura del PANEL ABATIBLE

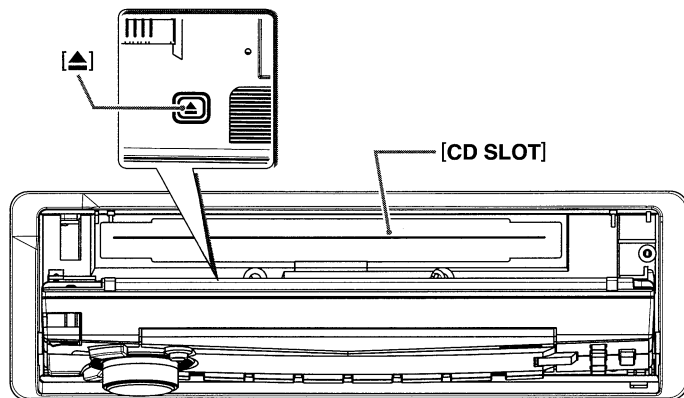

Note: Be sure to unfold this page and refer to the front diagrams as you read each chapter.

Remarque: Veuillez déplier cette page et vous référer aux schémas quand vous lisez chaque chapitre.

Nota: Cuando lea los capítulos, despliegue esta página y consulte los diagramas.

# 3. BUTTON TERMINOLOGY

## Note:

- Be sure to read this chapter referring to the front diagrams of chapter "2. CONTROLS" on page 3.

## Names of the Buttons and their Functions

### [OPEN] button

- Deeply push in [OPEN] button to unlock the flip down panel.

### [ADJ] button

- Press the button to switch to the ADJ mode.

### [▶||] button

- Perform preset scan while in the radio mode.  
Press and hold the button for 2 seconds or longer to perform auto store.
- Play or pause a CD while in the CD/MP3/WMA mode.

### [SENSOR]

- Receiver for remote control unit.
- Operating range: 30° in all directions.

### [ISR] button

- Recall ISR radio station in memory.
- Press and hold for 2 seconds or longer: Store current station into ISR memory (radio mode only).

### [D] button

- Switch the display indication (Main display, Title display).
- Press and hold the button for 1 second or longer to enter the display adjustment mode.

### [Z] button

- Press the button to select one of the 3 types of sound characteristics already stored in memory.

### [T] button

- Press the button to input a title in the Radio mode.
- Press the button to input a title in the CD mode.
- Press the button to switch the user titles or track titles, while in the CD/MP3/WMA mode.
- Press the button to scroll the title during the CD-text play, while in the CD/MP3/WMA mode.

### [BND] button

- Switch the band, or seek tuning or manual tuning while in the radio mode.
- Play a first track while in the CD/MP3/WMA mode.  
Press and hold the button for 1 second or longer to perform multi-session.
- Press the button to change the character.

### [UP], [DN] buttons

- Select the Folder. (MP3/WMA disc only)

### [RDM] button

- Perform random play while in the CD/MP3/WMA mode.
- Press and hold the button for 1 second or longer to perform folder random play while in the MP3/WMA mode.

### [RPT] button

- Repeat play while in the CD/MP3/WMA mode.
- Press and hold the button for 1 second or longer to perform folder repeat play while in the MP3/WMA mode.

### [SCN] button

- Perform scan play for 10 seconds of each track while in the CD/MP3/WMA mode.
- Press and hold the button for 1 second or longer to perform folder scan play while in the MP3/WMA mode.

### [DIRECT] buttons

- Store a station into memory or recall it directly while in the radio mode.

### [SRC] button

- Press the button to turn on the power.
- Press and hold the button for 1 second or longer to turn off the power.
- Switch the operation mode among the radio mode, etc.

### [ROTARY] knob

- Adjust the volume by turning the knob clockwise or counterclockwise.
- Use the knob to perform various settings.

## Names of the Buttons and their Functions

### [A-M] button

- Press the button to switch to the audio mode. (bass/treble, balance/fader)
- Press and hold for 1 second or longer to turn on or off the M-B EX mode.

### [◀◀, ▶▶] lever

- Select a station while in the radio mode or select a track when listening to a CD. This lever is used to make various settings.
- Press the lever upward or downward and hold in position for 1 second or longer to enter the fast-forward or fast-backward mode.

### [▲] button

- Eject a CD when it is loaded into the unit.

### [CD SLOT]

- CD insertion slot.

## Major Button Operations when external equipment is connected to this unit

### When the CD/DVD changer is connected

- \* For details, see the section "CD changer operations". For the DVD changer, refer to the Owner's Manual provided with the DVD changer.

#### [▶||] button

- Play or pause a CD, DVD.

#### [D] button

- Press the button to display the title (Main display, Title display, Clock display).
- Press and hold the button for 1 second or longer to enter the display adjust mode.

#### [T] button

- Press the button switches the user titles or track titles, etc. while in the CD changer mode.
- Press and hold the button for 1 second or longer to input a title in the CD changer mode.
- Press the button to scroll the title during CD-text play.

#### [BND] button

- Move the next disc in increasing order.

#### [UP], [DN] buttons

- Select the disc.

#### [RDM] button

- Perform random play. Press and hold the button for 1 second or longer to perform disc random play.

#### [RPT] button

- Perform repeat play. Press and hold the button for 1 second or longer to perform disc repeat play.

#### [SCN] button

- Perform scan play for 10 seconds of each track.  
Press and hold the button for 1 second or longer to perform disc scan play.

#### [◀◀, ▶▶] lever

- Select a track when listening to a disc.
- Press the lever upward or downward and hold in position for 1 second or longer to enter the fast-forward or fast-backward mode.

### When the TV is connected

- \* For details, see the section "TV Operations".

#### [▶||] button

- Perform preset scan while in the TV mode.  
Press and hold the button for 2 seconds or longer to perform auto store.

#### [BND] button

- Switch the band.  
Press and hold the button for 1 second or longer to switch to the seek tuning or manual mode.

#### [DIRECT] buttons

- Store a station into memory or recall it directly.

## Major Button Operations when external equipment is connected to this unit

---

### [ADJ] button

- Press the button to switch to the ADJ mode.
- Press and hold the button for 1 second or longer to switch to the TV picture mode or VTR (external) picture mode.

### [◀, ▶] lever

- Select a station.

## When the Satellite Radio Receiver is connected

\* For details, refer to the Owner's Manual provided with the Satellite Radio Receiver.

### [▶] button

- Performs category scan while in the Satellite mode. Press and hold the button for 2 seconds or longer to perform preset scan.

### [ISR] button

- Select a category.

### [DIRECT] buttons

- Stores a station into memory or recall it directly while in the Satellite mode.

### [SRC] button

- Press the button to switch the operation mode among the Satellite mode, etc.

### [◀, ▶] lever

- Select a station.

# Display Items

## Source Indication

**FM1~3, AM** : Radio mode

**SR1~3** : Satellite radio mode

**ISR** : Instant station recall

**CD** : CD mode

**CDC1-4** : CD changer mode

**DVDC** : DVD changer mode

**TV1-2** : TV mode

**AUX** : AUX mode

**AUDIO** : Audio mode

**EDIT** : Editing for title input,  
DISP ADJ mode, ADJ  
mode and ADJ mode

**RADIO MODE** : Preset no./frequency

**CD MODE** : Track no./playback time

**MP3/WMA MODE** : Folder no./track no./playback time

**CD/DVD CHANGER MODE** : Disc no./track no.  
/playback time

**TV MODE** : Preset no./channel

**AUDIO MODE**

**DISP ADJUST**

**RDS MODE**

**ADJUST MODE**

**TITLE INPUT**

Operation status indication

Clock time, mute indication



**MANU** : Manual indication

**DRM** : Digital right  
management indication

## Source Icon

Source icon changes based  
on the selecting mode

## Function Display

**MP3** : MP3 indication

**WMA** : WMA indication

**ST** : Stereo indication

**MONO** : Mono indication

## Z-Enhancer

**Z+1** : BASS BOOST  
indication

**Z+2** : IMPACT indication

**Z+3** : EXCITE indication

**SAT** : Satellite radio indication

## LCD Screen

In extreme cold, the screen movement may slow down and the screen may darken, but this is normal. The screen will recover when it returns to normal temperature.

## 4. PRECAUTIONS

1. When the inside of the car is very cold and the player is used soon after switching on the heater moisture may form on the disc or the optical parts of the player and proper playback may not be possible. If moisture forms on the disc, wipe it off with a soft cloth. If moisture forms on the optical parts of the player, do not use the player for about one hour. The condensation will disappear naturally allowing normal operation.
2. Driving on extremely bumpy roads which cause severe vibration may cause the sound to skip.
3. This unit uses a precision mechanism. Even in the event that trouble arises, never open the case, disassemble the unit, or lubricate the rotating parts.

This equipment has been tested and found to comply with the limits for a Class B digital device, pursuant to Part 15 of the FCC Rules.

These limits are designed to provide reasonable protection against harmful interference in a residential installation.

This equipment generates, uses, and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation.

If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to consult the dealer or an experienced radio/TV technician for help.

### ⚠ CAUTION


**USE OF CONTROLS, ADJUSTMENTS, OR PERFORMANCE OF PROCEDURES OTHER THAN THOSE SPECIFIED HEREIN, MAY RESULT IN HAZARDOUS RADIATION EXPOSURE.**

**THE COMPACT DISC PLAYER SHOULD NOT BE ADJUSTED OR REPAIRED BY ANYONE EXCEPT PROPERLY QUALIFIED SERVICE PERSONNEL.**

### INFORMATION FOR USERS:

**CHANGES OR MODIFICATIONS TO THIS PRODUCT NOT APPROVED BY THE MANUFACTURER WILL VOID THE WARRANTY AND WILL VIOLATE FCC APPROVAL.**

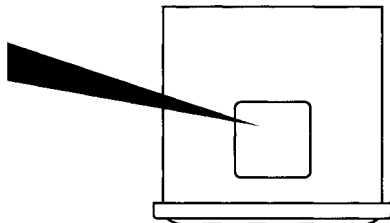

MODEL	<b>DXZ465MP</b>	Clarion
12V $\ominus$ GROUND		
<b>AM 530-1710kHz/FM 87.9-107.9MHz</b>		
THIS DEVICE COMPLIES WITH PART 15 OF THE FCC RULES. OPERATION IS SUBJECT TO THE FOLLOWING TWO CONDITIONS: (1) THIS DEVICE MAY NOT CAUSE HARMFUL INTERFERENCE, AND (2) THIS DEVICE MUST ACCEPT ANY INTERFERENCE RECEIVED, INCLUDING INTERFERENCE THAT MAY CAUSE UNDESIRABLE OPERATION.		
THIS PRODUCTION COMPLIES WITH DHHS RULES 21 CFR SUBCHAPTER J APPLICABLE AT DATE OF MANUFACTURE.		
CLARION CO., LTD. 55 KAMITODA, TODA-SHI, SAITAMA-KEN, JAPAN		
This product includes technology owned by Microsoft Corporation and cannot be used or distributed without a license from MSLGP		
MANUFACTURED:		
SERIAL No. PE-2799B	286-6788-00 Clarion Co., Ltd. MADE IN MALAYSIA	



Bottom View of Source Unit




## 5. HANDLING COMPACT DISCS

This unit has been designed specifically for playback of compact discs bearing the  or  mark. No other discs can be played.

To remove the compact disc from its storage case, press down on the center of the case and lift the disc out, holding it carefully by the edges.

Removing the disc

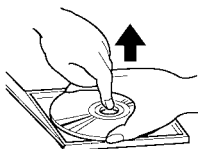


Proper way to hold the compact disc




Always handle the compact disc by the edges. Never touch the surface.

To remove fingerprints and dust, use a soft cloth, and wipe in a straight line from the center of the compact disc to the circumference.

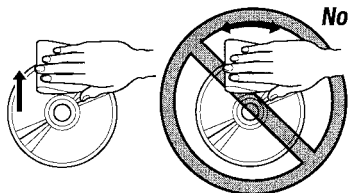


New discs may have some roughness around the edges. The unit may not work or the sound may skip if such discs are used. Use a ball-point pen, etc. to remove roughness from the edge of the disc.

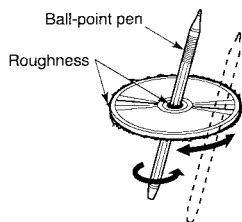


### Note on compact discs


Never stick labels on the surface of the compact disc or mark the surface with a pencil or pen.

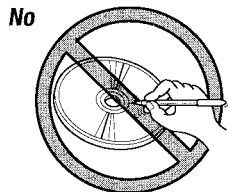


Do not use any solvents such as commercially available cleaners, anti-static spray, or thinner to clean compact discs.

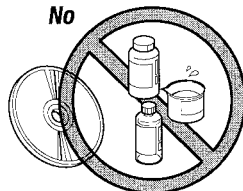

Do not use compact discs that have large scratches, are misshapen, or cracked, etc. Use of such discs will cause misoperation or damage.

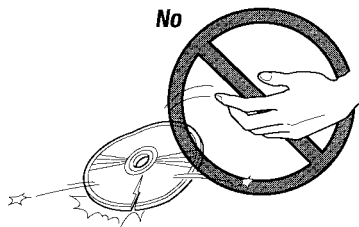

Do not expose compact discs to direct sunlight or any heat source.

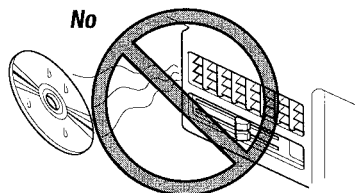

### Note:

- Do not use commercially available CD protection sheets or discs equipped with stabilizers, etc. These may get caught in the internal mechanism and damage the disc.


## 6. DCP (Detachable Control Panel)

The control panel can be detached to prevent theft. When detaching the control panel, store it in the DCP (Detachable Control Panel) case to prevent scratches.


We recommend taking the DCP with you when leaving the car.

### Removing the DCP


1. Press the [SRC] button for 1 second or longer to switch off the power.

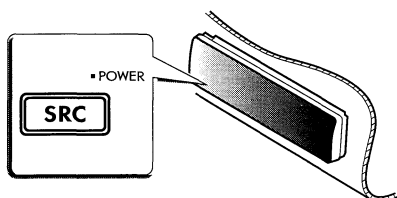


2. Press in the [OPEN] button.  
\* If the flip down panel does not open fully, gently open it with your hand.

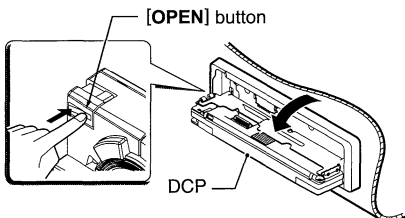

3. Pull the DCP toward you and remove it.

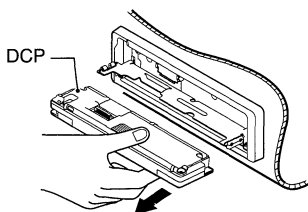

4. Close the HOLD FLAP.

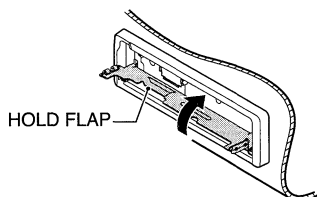


### CAUTION

Be sure to close the HOLD FLAP for safety when removing the DCP.


### Attaching the DCP

1. Insert the right side of the DCP into the main unit.
2. Insert the left side of the DCP to attach into the main unit.

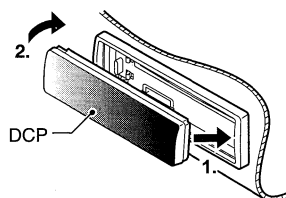

### CAUTION


- The DCP can easily be damaged by shocks. After removing it, be careful not to drop it or subject it to strong shocks.
- If the FLIP DOWN PANEL is kept open, the DCP may drop due to vibration of the car. This result in damage to the DCP. So close the FLIP DOWN PANEL or remove the DCP to store into the case.
- The connector connecting the main unit and the DCP is an extremely important part. Be careful not to damage it by pressing on it with fingernails, pens, screwdrivers, etc.

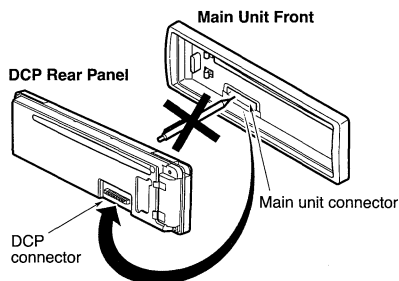

#### Note:

- If the DCP is dirty, wipe off the dirt with a soft, dry cloth only.

# 7. REMOTE CONTROL

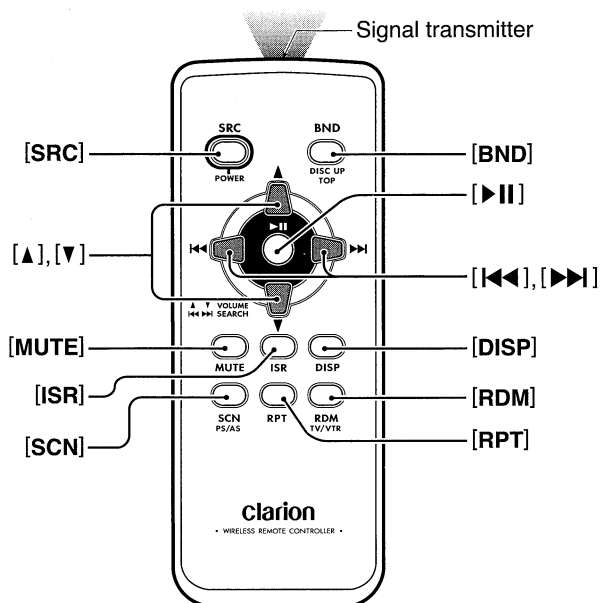



## Inserting the Battery

1. Turn over the remote control unit and slide the cover in the direction indicated by the arrow in the illustration.
2. Insert the battery (CR2025) into the insertion guides, with the printed side (+) facing upwards.
3. Press the battery in the direction indicated by the arrow so that it slides into the compartment.
4. Replace the cover and slide in until it clicks into place.

### Notes:

Misuse may result in rupture of the battery, producing leakage of fluid and resulting in personal injury or damage to surrounding materials. Always follow these safety precautions:

- Use only the designated battery.
- When replacing the battery, insert properly, with +/- polarities oriented correctly.
- Do not subject battery to heat, or dispose of in fire or water. Do not attempt to disassemble the battery.
- Dispose of used batteries properly.

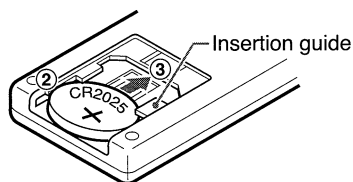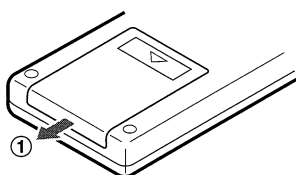

# Functions of Remote Control Unit Buttons

Mode Button	Radio/Satellite	CD/MP3/WMA	CD Changer DVD Changer	TV
[SRC]	Press the button to power on. Press and hold the button for 1 second or longer: Power off. Switch among radio, Satellite radio receiver, CD/MP3/WMA, AUX, CD changer, DVD changer and TV.			
[BND]	Switch reception band.	Play the first track. Top play.	Move the next disc in increasing order.	Switch reception band.
[▲] , [▼]	Increase and decrease volume (in all modes).			
[◀◀] , [▶▶]	Move preset channels up and down.	Move tracks up and down. Press and hold the button for 1 second or longer: Fast-forward/fast-backward.		Move preset channels up and down.
[▶▶]	No function.	Switch between playback and pause.		No function.
[MUTE]	Turn mute on and off.			
[ISR]	Recall ISR radio station in memory. Press and hold for 2 seconds or longer: Store current station into ISR memory (radio mode only).			
[DISP]	Switch among main display, title display.			
[SCN]	Preset scan. Press and hold the button for 2 seconds or longer: Auto store.	Scan play. Press and hold the button for 1 second or longer to perform folder scan play while in the MP3/WMA mode.	Scan play. Press and hold the button for 1 second or longer: Disc scan play.	Preset scan. Press and hold the button for 2 seconds or longer: Auto store.
[RPT]	No function.	Repeat play. Press and hold the button for 1 second or longer to perform folder repeat play while in the MP3/WMA mode.	Repeat play. Press and hold the button for 1 second or longer: Disc repeat play.	No function.
[RDM]	No function.	Random play. Press and hold the button for 1 second or longer to perform folder random play while in the MP3/WMA mode.	Random play. Press and hold the button for 1 second or longer: Disc random play.	Switch between TV and VTR.

\* Some of the corresponding buttons on the main unit and remote control unit have different functions.

# 8. OPERATIONS

## Basic Operations

**Note:** Be sure to read this chapter referring to the front diagrams of chapter "2. CONTROLS" on page 3.

### ⚠ CAUTION

Be sure to lower the volume before switching off the unit power or the ignition key. The unit remembers its last volume setting. If you switch the power off with the volume up, when you switch the power back on, the sudden loud volume may hurt your hearing and damage the unit.

### Turning on/off the power

**Note:**

- Be careful about using this unit for a long time without running the engine. If you drain the car's battery too far, you may not be able to start the engine and this can reduce the service life of the battery.

1. Press the [SRC] button.
2. The illumination and display on the unit light up. The unit automatically remembers its last operation mode and will automatically switch to display that mode.
3. Press and hold the [SRC] button for 1 second or longer to turn off the power for the unit.

**Note:**

- System check  
The first time this unit is turned on after the wire connections are completed, it must be checked what equipment is connected. When the power is turned on, the "SYSTEM CHECK" appears in the display, then the unit returns to the clock display mode. The system check starts within the unit. When the system check is complete, press the [SRC] button again.

### Selecting a mode

1. Press the [SRC] button to change the operation mode.
2. Each time you press the [SRC] button, the operation mode changes in the following order:

**Radio mode → Satellite mode → CD/MP3/WMA mode → CD changer mode → DVD changer mode → TV mode → AUX mode → Radio mode...**

- \* External equipment not connected with CeNET is not displayed.

- \* If AUX is set in AUX/TEL, AUX mode can be selected.

**Note:**

- If the CD mode is selected when no disc is inserted, the display shows "NO DISC".

### Switching the display

Press the [D] button to select the desired display. Each time you press the [D] button, the display switches in the following order:

- Main display



- Title display



- \* In the case of a user title, only the top level is displayed.
- \* In the case of radio/TV/AUX/DVD changer, the display cannot be switched to "Title Display".
- \* Once selected, the preferred display becomes the display default. When a function adjustment such as volume is made, the screen will momentarily switch to that function's display, then revert back to the preferred display several seconds after the adjustment.
- \* If the button operation is performed with the screen saver function on, the operation display corresponding to the button operation is shown for about 30 seconds and the display returns to the screen saver display.

## Basic Operations

For details, refer to the subsection "Turning the screen saver function on or off" in section "Operations Common to Each Mode".

\* When you have entered a title in a CD/MP3/WMA, it appears in the title display. If you have not entered a title, "NO TITLE" appears in the title display instead.

For information on how to enter a title, refer to the subsection "Entering titles" in section "Operations Common to Each Mode".

### Adjusting the volume

1. Press the front part of the [ROTARY] knob. The knob will pop up.
2. Turning the [ROTARY] knob clockwise increases the volume; turning it counterclockwise decreases the volume.
  - \* The volume level is from 0 (minimum) to 33 (maximum).

### Audio mode adjustments

1. Press the [A-M] button to select the adjustment mode. The mode switches as follows each time the [A-M] button is pressed:

**BASS → TREBLE → BALANCE → FADER**  
→ Previous mode

2. Turning the [ROTARY] knob to adjust the selected audio mode.

BASS (Bass) :  
Adjustment range : -6 to +7

TREBLE (Treble) :  
Adjustment range : -6 to +6

BALANCE (Balance) :  
Adjustment range : L13 to R13

FADER (Fader) :  
Adjustment range : F12 to R12

\* The display returns to the previous mode 7 seconds after the adjustment.

### Adjusting the bass

1. Press the [A-M] button and select "BASS 0".
2. Turning the [ROTARY] knob clockwise emphasizes the bass; turning it counterclockwise attenuates the bass.
  - \* The factory default setting is "0".  
(Adjustment range: -6 to +7)

### Adjusting the treble

1. Press the [A-M] button and select "TREBLE 0".
2. Turning the [ROTARY] knob clockwise emphasizes the treble; turning it counterclockwise attenuates the treble.
  - \* The factory default setting is "0".  
(Adjustment range: -6 to +6)

### Adjusting the balance

1. Press the [A-M] button and select "BALANCE 0".
2. Turning the [ROTARY] knob clockwise emphasizes the sound from the right speaker; turning it counterclockwise emphasizes the sound from the left speaker.
  - \* The factory default setting is "0".  
(Adjustment range: L13 to R13)
3. When the adjustment is complete, press the [A-M] button several times until the function mode is reached.

### Adjusting the fader

1. Press the [A-M] button and select "FADER 0".
2. Turning the [ROTARY] knob clockwise emphasizes the sound from the front speakers; turning it counterclockwise emphasizes the sound from the rear speakers.
  - \* The factory default setting is "0".  
(Adjustment range: F12 to R12)
3. When the adjustment is complete, press the [A-M] button several times until the function mode is reached.

### Setting the Z-Enhancer

This unit are provided with 3 types of sound tone effects stored in memory. Select the one you prefer.

\* The factory default setting is "Z-ENHANCER OFF".

Each time you press the [Z] button, the tone effect changes in the following order:

"OFF" → "BASS BOOST" → "IMPACT" →  
"EXCITE" → "OFF" ...

## Basic Operations

- **BASS BOOST**: bass emphasized
- **IMPACT** : bass and treble emphasized
- **EXCITE** : bass and treble emphasized  
mid de-emphasized
- **OFF** : no sound effect

### Adjusting MAGNA BASS EX

The MAGNA BASS EX does not adjust the low sound area like the normal sound adjustment function, but emphasizes the deep bass sound area to provide you with a dynamic sound.

\* The factory default setting is off.

1. Press and hold the **[A-M]** button for 1 second or longer to turn on the MAGNA BASS EX effect.  
“**M-BASS EX ON**” lights in the display.
2. Press and hold the **[A-M]** button for 1 second or longer to turn off the MAGNA BASS EX effect.  
“**M-BASS EX OFF**” lights in the display.

## Radio Mode Operations

### Listening to the radio

1. Press the **[SRC]** button and select the radio mode, then the radio will be on.
2. To select a preset band, press the **[BND]** button, then select one of the preset bands such as FM1, FM2, FM3 or AM. Every time the **[BND]** button is pressed, the display will change as:  
FM1 → FM2 → FM3 → AM → FM1...
3. Press the **[◀◀, ▶▶]** lever upward or downward to tune in the desired station.

### Seek tuning

1. Press the **[BND]** button and select the desired band (FM or AM).  
\* If “**MANU**” is lit in the display, press and hold the **[BND]** button for 1 second or longer.  
“**MANU**” in the display goes off and seek tuning is now available.
2. Press the **[◀◀, ▶▶]** lever upward or downward to start automatic station tuning.  
When the lever is pressed upward, search will be performing in the direction of higher frequencies. When the lever is pressed downward, search will be performed in the direction of lower frequencies.

### Manual tuning

There are 2 ways available: Quick tuning and step tuning.

When you are in the step tuning mode, the frequency changes one step at a time. In the quick tuning mode, you can quickly tune the desired frequency.

1. Press the **[BND]** button and select the desired band (FM or AM).  
\* If “**MANU**” is not lit in the display, press and hold the **[BND]** button for 1 second or longer.  
“**MANU**” is lit in the display and manual tuning is now available.
2. Tune into a station.

## Radio Mode Operations

### ● Quick tuning:

Press the [**◀▶**] lever upward or downward and hold in position for 1 second or longer to begin station tuning.

### ● Step tuning:

Press the [**◀▶**] lever upward or downward to perform manual tuning.

## Preset memory function

Preset memory function can store up to 24 stations:

six stations for each of FM1, FM2, FM3 and AM.

## Manual memory function

1. Press the [**BND**] button, to select a band you want to store in the memory.
2. Press the [**◀▶**] lever to tune into a desired station.
3. Press and hold one of the [**DIRECT**] button for 2 seconds or longer to store the current station into preset memory.

## Auto store

Auto store is a function for storing up to 6 stations that are automatically tuned in sequentially. If 6 receivable stations cannot be received, a previously stored station remains unoverwritten at the memory position.

1. Press the [**BND**] button and select the desired band (FM or AM).
2. Press and hold the [**PS/AS**] button for 2 seconds or longer. The stations with good reception are stored automatically to the preset channels.

## Preset scan

Preset scan receives the stations stored in preset memory in order. This function is useful when searching for a desired station in memory.

1. Press the [**PS/AS**] button.
2. When a desired station is tuned in, press the [**PS/AS**] button again to continue receiving that station.

### Note:

- Be careful not to press and hold the [**PS/AS**] button for 2 seconds or longer, otherwise the auto store function is engaged and the unit starts storing stations.

## Recalling a preset station

A total of 24 preset positions (6-FM1, 6-FM2, 6-FM3, 6-AM) exists to store individual radio stations in memory. Pressing the corresponding [**DIRECT**] button recalls the stored radio frequency automatically.

1. Press the [**BND**] button and select the desired band (FM or AM).
2. Press the corresponding [**DIRECT**] button to recall the stored station.

\* Press and hold one of the [**DIRECT**] buttons for 2 seconds or longer to store that station into preset memory.

## Instant station recall (ISR)

Instant station recall is a special radio preset that instantly accesses a favorite radio station at a touch of a button. The ISR function even operates with the unit in other modes.

### ● ISR memory

1. Select the station that you wish to store in ISR memory.
2. Press and hold the [**ISR**] button for 2 seconds or longer.

### ● Recalling a station with ISR

In any mode, press the [**ISR**] button to turn on the radio function and tune the selected radio station. "ISR" and its frequency appear in the display. Press the [**ISR**] button again to return to the previous mode.



# CD/MP3/WMA Mode Operations

## What is MP3?

MP3 is an audio compression method and classified into audio layer 3 of MPEG standards. This audio compression method has penetrated into PC users and become a standard format. This MP3 features the original audio data compression to about 12 percent of its initial size with a high quality sound. This means that about 10 music CDs can be recorded on a CD-R disc or CD-RW disc to allow a long listening time without having to change CDs.

## What is WMA?

WMA is the abbreviation of Windows Media Audio, an audio file format developed by Microsoft Corporation.

### Notes:

- If you play a file with DRM (Digital Rights Management) for WMA remaining ON, no audio is output.
- Windows Media™, and the Windows® logo are trademarks, or registered trademarks of Microsoft Corporation in the United States and/or other countries.

### ● To disable DRM (Digital Rights Management):

1. When using Windows Media Player 8, click on **TOOLS → OPTIONS → COPY MUSIC** tab, then under **COPY SETTINGS** unclick the check box for **PROTECT CONTENT**. Then, reconstruct files.
2. When using Windows Media Player 9, click on **TOOL → OPTIONS → MUSIC RECORD** tab, then under **Recording settings**, unclick the Check box for **RECORD PROTECTED MUSIC**. Then, reconstruct files. Personally constructed WMA files are used at your own responsibility.

### ● Precautions when creating MP3/WMA disc

- Usable sampling rates and bit rates:
1. MP3: Sampling rate 11.025 kHz-48 kHz,  
Bit rate: 8 kbps-320 kbps/VBR
  2. WMA: Bit rate 48 kbps-192 kbps

### ● File extensions

- Always add a file extension “.MP3” or “.WMA” to MP3 or WMA file by using single byte letters. If you add a file extension other than specified or forget to add the file extension, the file cannot be played.

### ● Logical format (File system)

1. When writing MP3/WMA file on a CD-R disc or CD-RW disc, please select “**ISO9660 level 1, 2 or JOLIET or Romeo**” as the writing software format. Normal play may not be possible if the disc is recorded on another format.
2. The folder name and file name can be displayed as the title during MP3/WMA play but the title must be within 64 single byte alphabetical letters and numerals (including an extension).
3. Do not affix a name to a file inside a folder having the same name.

### ● Folder structure

1. A disc with a folder having more than 8 hierarchical levels will be impossible.

### ● Number of files or folders

1. Up to 255 files can be recognized per folder. Up to 512 files can be played.
2. Tracks are played in the order that they were recorded onto a disc. (Tracks might not always be played in the order displayed on the PC.)
3. Some noise may occur depending on the type of encoder software used while recording.

## CD-DA/MP3/WMA selection on multi-session CD

When a disc contains both normal CD type tracks and MP3/WMA tracks mixedly, you can select which type of the recorded tracks to play.

### ● Default value is “CD”.

Each time you press and hold the [BND] button for 1 second or longer, the mixed mode is switched between CD type or MP3/WMA type. The following indication appears in the title display when switching the track type to be played.

● Display when CD type track is selected: **M-SESS CD**



● Display when MP3/WMA type track is selected: **M-SESS MP3**

## CD/MP3/WMA Mode Operations

- Types of recording that can be played are as follows.

Disc \ Setting	Set to CD	Set to MP3/WMA
Mixed with CD and MP3/WMA type tracks	Play CD	Play MP3/WMA
CD type track only	Play CD	Play CD
MP3/WMA type track only	Play MP3/WMA	Play MP3/WMA

- After making these settings, remove the disc and then reinsert it.
- When a mixed mode CD is loaded and CD is set, the track to be played first is MP3/WMA file data and no sound is heard.

### Note:

- When playing a CCCD (Copy Control CD), set the setting to CD type. When this is set to MP3/WMA type, the CD cannot be played normally in some cases.

## Disc-In-Play function

As long as the ignition key is turned to the ON or ACC position, this function allows you to turn the power to the unit and start playing the disc automatically when the disc is inserted even if the power is not turned on.

### CAUTION

- Do not try to put your hand or fingers in the disc insertion slot. Also never insert foreign objects into the slot.
- Do not insert discs where adhesive comes out from cellophane tape or a rental CD label, or discs with marks where cellophane tape or rental CD labels were removed. It may be impossible to extract these discs from the unit and they may cause the unit to break down.

## Backup eject function

Just pressing the [▲] button ejects the disc even if the power to the unit was not turned on.

- Press the [OPEN] button to open the FLIP DOWN PANEL.

### Note:

- If the FLIP DOWN PANEL will not open far enough, open it gently with your hand.

- Press the [▲] button. Remove the disc after it is ejected.

- Close the FLIP DOWN PANEL.

### Notes:

- Always close the FLIP DOWN PANEL once you take out the disc.
- If you force a CD into before auto reloading, this can damage the CD.
- If a CD (12 cm) is left in the ejected position for 15 seconds, the CD is automatically reloaded. (Auto reload).
- 8 cm CDs are not auto reloaded. Be sure to remove it when ejected.

## Listening to a disc already loaded in the unit

Press the [SRC] button to select the CD/MP3/WMA mode.

When the unit enters the CD/MP3/WMA mode, play starts automatically.

If there is no disc loaded, the indication "NO DISC" appears in the title display.



- \* The mode changes each time the [SRC] button is pressed. (Modes are not displayed for equipment that is not connected.)

**Radio → (Satellite) → CD/MP3/WMA → (CD changer) → (DVD changer) → (TV) → AUX → Radio...**

## Loading a CD

- Press the [OPEN] button to access the CD SLOT behind the FLIP DOWN PANEL.
- Insert a CD into the center of the CD SLOT with the labeled side facing up. The CD plays automatically after loading.

### Notes:

- Never insert foreign objects into the CD SLOT.
- If the CD is not inserted easily, there may be another CD in the mechanism or the unit may require service.
- Discs not bearing the  or  mark and CD-ROMs cannot be played by this unit.
- Some CDs recorded in CD-R/CD-RW mode may not be usable.

## CD/MP3/WMA Mode Operations

### Loading 8 cm CD

- \* No adapter is required to play an 8 cm CD.
- \* Insert the 8 cm CD into the center of the insertion slot.

3. Close the FLIP DOWN PANEL.

### CAUTION

**Be careful not to catch your hand or fingers while closing the FLIP DOWN PANEL.**

#### Notes:

- If the FLIP DOWN PANEL does not open fully, gently open with your hand.
- After loading a CD, always close the FLIP DOWN PANEL.

### Pausing play


1. Press the [▶||] button to pause play. "PAUSE" appears in the display.
2. To resume CD play, press the [▶||] button again.

### Displaying CD titles


This unit can display title data for CD-text/MP3/WMA disc and user titles input with this unit.

1. Press the [D] button to display the title.
2. Each time you press the [T] button, the title display changes in the following order:

#### ● CD-TEXT data

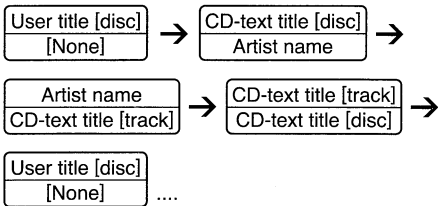

#### ● MP3/WMA disc

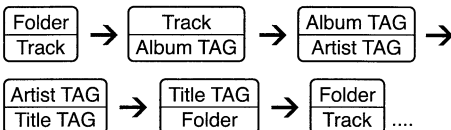


#### Notes:

- If the CD playing is not a CD-text data or no user title has been input, "U NO TITLE" appears in the display.
- If MP3/WMA disc is not input TAG, "D NO TAG" appears in the display.
- For MP3, supports ID3 Tags V2.3/2.2/1.1/1.0.
- Tag displays give priority to V2.3/2.2
- In the case of album Tags for WMA, the information written into the extension header is displayed.
- Only ASCII characters can be displayed in Tags.

### Title display mode

1. There are 5 types of display for the Title Display mode.
2. To select the next type, press the [T] button for less than 1 second.

The arrangement is shown below.

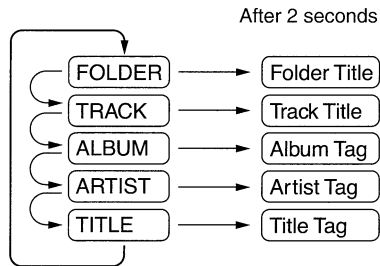

3. The displayed item can be scrolled by pressing the [T] button for more than 1 second.
4. If a MP3/WMA file does not support for ID3 TAG, the display will show "NO TAG"
5. If a MP3/WMA file encode with ID3 TAG header but no consist of any TAG information, the display will show nothing.

#### Notes:

- The folder name will be displayed as "ROOT" which the file allocates in the root folder.
- The MP3 player decodes each file ID3 TAG ver 2 by default, if ID3 TAG ver 2 is unavailable, ID3 TAG ver 1 will be decoded.
- UNICODE ID3 (Chinese, Japanese and etc) is not supported.

## CD/MP3/WMA Mode Operations

### Selecting a track

#### ● Track-up

1. Press the [▶▶] lever upward to move to the beginning of the next track.
2. Each time the [▶▶] lever is pressed upward, playback proceeds to another track in the advancing direction.

#### ● Track-down

1. Press the [◀◀] lever downward to move the beginning of the current track.
2. Press the [◀◀] lever downward twice to move to the beginning of the previous track.

### Fast-forward/fast-backward

#### ● Fast-forward

Press the [▶▶] lever upward and hold in position for 1 second or longer.

#### ● Fast-backward

Press the [◀◀] lever downward and hold in position for 1 second or longer.


\* For MP3/WMA discs, it takes some time until the start of searching and between tracks. In addition, the playing time may have a margin of error.

### MP3/WMA playing order

When selected for play folder up down functions, files and folders are accessed in the order in which they were written by the CD-ROM writer. Because of this, the order in which they are expected to be played may not match the order in which they are actually played. You may be able to set the order in which MP3/WMA are to be played by writing them onto a medium such as a CD-R with their file names beginning with play sequence numbers such as "01" to "99", depending on your CD writer.

For example, a medium with the following folder/file hierarchy is shown below.

Example of a medium's folder/file hierarchy

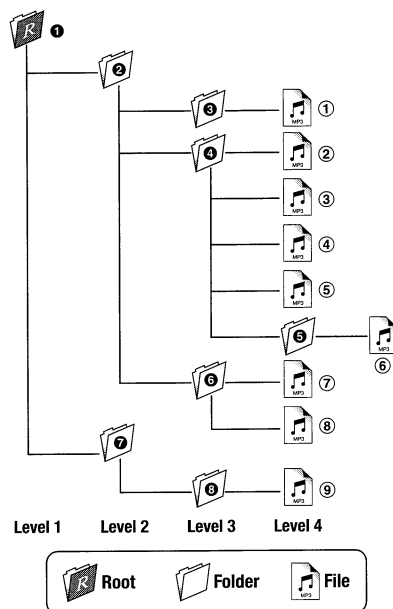


### Folder select

This function allows you to select a folder containing MP3/WMA files and start playing from the first track in the folder.

1. Press the [DN] or the [UP] button.

Press the [DN] button to move the previous folder. Press the [UP] button to move the next folder.

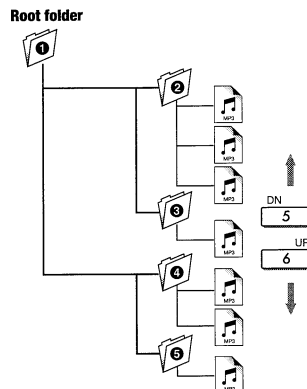

- \* Press the [UP] button while in the final folder to shift to the first folder.
  - \* Folder without an MP3/WMA file is not selectable.
2. To select a track, press the [◀◀, ▶▶] lever upward or downward.

### Top function

 
The top function resets the CD player to the first track of the disc. Press the [BND] button to play the first track (Track No. 1) on the disc.

- \* In case of MP3/WMA, the first track of a folder being played will be returned.

### Other various play functions


#### ● Scan play

This function allows you to locate and play the first 10 seconds of all the tracks recorded on a disc.

1. Press the [SCN] button to perform scan play.  
“ SCN” appears in the display.
  - \* Scan play starts from the next track after the track currently being played.


#### ● Folder scan play

This function allows you to locate and play the first 10 seconds of the first track of all the folders on an MP3/WMA disc.

1. Press and hold the [SCN] button for 1 second or longer to perform folder scan play.  
“ SCN” appears in the display.
  - \* Folder scan play starts from the next track after the track currently being played.


#### ● Repeat play

This function allows you to play the current track repeatedly.

1. Press the [RPT] button to perform repeat play.  
“ RPT” appears in the display.

 
#### ● Folder repeat play

This function allows you to play a track currently being played in the MP3/WMA folder repeatedly.

1. Press and hold the [RPT] button for 1 second or longer to perform folder repeat play.  
“ RPT” appears in the display.


#### ● Random play

This function allows you to play all tracks recorded on a disc in a random order.

1. Press the [RDM] button to perform random play.  
“ RDM” appears in the display.

#### ● Folder random play

This function allows you to play all the tracks of all the folders recorded on an MP3/WMA disc in a random order.

1. Press and hold the [RDM] button for 1 second or longer to perform folder random play.  
“ RDM” appears in the display.

#### ● To cancel play

1. Press the operating button previously selected.

# Operations Common to Each Mode

## To change display setting

1. Press and hold the [D] button for 1 second or longer to switch to the adjustment selection display.

2. Press the [◀▶] lever upward or downward to select the "item name".

"CLOCK **Push ENT**" ↔

"SCREEN SVR **Push ENT**" ↔

"MSG INPUT **Push ENT**" ↔

"AUTO SCROLL" ↔ "DIMMER" ↔

"CONTRAST"

3. Turn the [ROTARY] knob to select the "desired setting value".

\* After completing settings, press the [D] button to return to the previous mode.

### ● Setting the clock

- 2-1. Select "↕CLOCK **Push ENT**".

- 3-1. Press the [▶] button.

- 3-2. Press the [◀▶] lever upward or downward to select the hour or the minute.

- 3-3. Turn the [ROTARY] knob to set the correct time.

\* The clock is displayed in 12-hour format.

- 3-4. Press the [▶] button to store the time into memory.

#### Note:

- You cannot set the clock when it is displayed with only the ignition on. If you drain or remove the car's battery or take out this unit, the clock is reset. While setting the clock, if another button or operation is selected, the clock set mode is canceled.

### ● Turning the screen saver function on or off

This unit is provided with the screen saver function which allows you to show various kinds of patterns and characters in the operation status indication area of the display in a random order. You can turn on and off this function.

If the button operation is performed with the screen saver function on, the operation display corresponding to the button operation is shown for about 30 seconds and the display returns to the screen saver display.

\* The factory default setting is "Pattern SS".

- 2-1. Select "↕SCREEN SVR **Push ENT**".

- 3-1. Turn the [ROTARY] knob to select the setting.

Each time you turn the [ROTARY] knob, the setting changes in the following order:

"Pattern OFF" → "Pattern SS" → "Pattern MESSAGE"

### ● Entering MESSAGE INFORMATION

Message up to 30 characters long can be stored in memory and displayed as a type of screen saver setting.

\* The factory default setting is "WELCOME TO CLARION".

- 2-1. Select "↕MSG INPUT **Push ENT**".

- 3-1. Press the [▶] button.

- 3-2. Press and hold [BND] button for 1 second or longer to clear the old message.

- 3-3. Press the [◀▶] lever upward or downward to move the cursor.

- 3-4. Press the [BND] button to select a character. Each time you press the [BND] button, the character changes in the following orders:  
Capital letters → Small letters → Numbers/  
Symbols → Umlaut → Capital letters...

- 3-5. Turn the [ROTARY] knob to select the desired character.

- 3-6. Repeat step 3-3 to 3-5 to enter up to 30 characters for message.

- 3-7. Press and hold the [▶] button for 2 seconds or longer to store the message in memory and cancel input message mode.

\* Press and hold the [BND] button for 1 second or longer to cancel the input message. Then press and hold the [▶] button for 2 seconds or longer to store the message and the message return to default setting.

### ● Setting the method for title scroll

Set how to scroll in CD-TEXT, MP3/WMA title.

\* The factory default setting is "ON".

- 2-1. Select "↕AUTO SCROLL".

- 3-1. Turn the [ROTARY] knob to select "ON" or "OFF".

#### ● ON:

To scroll automatically.

#### ● OFF:

To scroll just 1 time when the title was changed or the [T] button was pressed for 1 second or longer.

## Operations Common to Each Mode

### ● Adjusting the display scroll speed

This feature allows you to slow down the scroll speed when the scroll speed is too fast, making it difficult to view the screen.

\* The factory default setting is "SPEED 3"

2-1. Select "↕ SCRL SPEED".

3-1. Turn the [ROTARY] knob to select the setting.

\* This setting item can be adjusted within the range SPEED 1 to SPEED 6.

Adjust this setting item while viewing how the appearance of the display changes.

### ● Dimmer control

You can setting the dimmer control "ON" or "OFF".

\* The factory default setting is "ON".

2-1. Select "↕ DIMMER".

3-1. Turn the [ROTARY] knob to select "ON" or "OFF".

### ● Adjusting the display contrast

You can adjust the display contrast to match the angle of installation of the unit.

\* The factory default setting is "08".  
(Adjustment level: 01 to 16)

2-1. Select "↕ CONTRAST".

3-1. Turn the [ROTARY] knob to adjust the contrast.

## To change other settings

1. Press the [ADJ] button to switch to the adjustment selection display.

2. Press the [◀▶] lever upward or downward to select the "item name".

Each time the [◀▶] lever is pressed up/down, the item display changes in the following order:

"BLINK LED" ↔ "AMP CANCEL" ↔  
("SID DISP") ↔ "AUX SENS" ↔  
"SYSTEM CHECK **Push ENT**"

\* SID DISP function only applies when a Satellite receiver is connected.

3. Turn the [ROTARY] knob to select the "desired setting item".

\* After completing settings, press the [ADJ] button to return to the previous mode.

### ● Anti-theft indicator

The red Anti-theft indicator is a function for preventing theft. When the DCP is removed from the unit, this indicator blinks.

\* The factory default setting is "OFF".

2-1. Select "↕ BLINK LED".

3-1. Turn the [ROTARY] knob to select "ON" or "OFF".

### ● Setting the external amplifier

\* The factory default setting is "OFF".

2-1. Select "↕ AMP CANCEL".

3-1. Turn the [ROTARY] knob to select "ON" or "OFF".

#### ● ON:

Use with connected AMP.

#### ● OFF:

Use with inside AMP.

### ● Displaying the Satellite ID No.

\* The factory default setting is the upper 6 digits.

2-1. Select "↕ SID DISP".

3-1. Turn the [ROTARY] knob to switch between the display for the upper 6 digits and the lower 6 digits.

### ● Triggered audio mute for cellular telephones

This unit requires special wiring to mute the audio signal automatically when a cellular telephone rings in the car.

\* This function is not compatible with all cellular telephones. Contact your local authorized Clarion dealer for information on proper installation and compatibility.

### ● Performing a system check

This function allows you to perform a system check from the adjust mode when required.

2-1. Select "↕ SYSTEM CHECK **Push ENT**".

3-1. Press and hold the [▶||] button for 1 second or longer.

"SYSTEM CHECK" appears in the display, then the unit returns to the previous operation mode.

## Operations Common to Each Mode

### Entering titles

Titles up to 10 characters long can be stored in memory and displayed for CD, CD changer and TV stations. The number of titles that can be entered for each mode are as follows.

Mode	Number of titles
CD mode	50 titles
TV mode	20 titles
Tuner mode	30 titles

CD changer mode	Number of titles
DCZ625 connected	100 titles
CDC655Tz connected	100 titles

1. Press the **[SRC]** button to select the mode you want to enter a title (TUNER, CD, CD changer or TV).
2. Select and play a CD in the CD changer or tune in to a TV station or TUNER for which you want to enter the title.
3. Press the **[D]** button and display the title display.
4. Press and hold the **[T]** button for 1 second or longer.  
The display switches to the title input display.
5. Press the **[◀▶]** lever upward or downward to move the cursor.
6. Press the **[BND]** button to select a character.  
Each time you press the **[BND]** button, the character changes in the following order:  
Capital letters → Small letters → Numbers/  
Symbols → Umlaut → Capital letters...
7. Turn the **[ROTARY]** knob to select the desired character.
8. Repeat steps 5 to 7 to enter up to 10 characters for the title.
9. Press and hold the **[▶▶]** button for 2 seconds or longer to store the title into memory and cancel title input mode.

### Clearing titles

1. Select and play a CD in the CD changer or tune in to a TV station or TUNER for which you want to clear the title.
2. Press the **[D]** button and display the title display.
3. Press and hold the **[T]** button for 1 second or longer.  
The display switches to the title input display.
4. Press and hold the **[BND]** button for 1 second or longer.  
All characters in the title disappear.
5. Press and hold the **[▶▶]** button for 2 seconds or longer to clear the title and cancel title input mode.

### AUX function

This system has an external input jack so you can listen to sounds and music from external devices connected to this unit.



# 9. OPERATIONS OF ACCESSORIES

## CD Changer Operations

### Note:

- The following operations are the same as for CD mode:

- \* **Pause**
- \* **Track selection**
- \* **Fast-forward/fast-backward**
- \* **Scan play**
- \* **Repeat play**
- \* **Random play**

See “**CD/MP3/WMA Mode Operations**” (page 17-21) for details.

### CD changer functions

When an optional CD changer is connected through the CeNET cable, this unit controls all CD changer functions. This unit can control a total of 2 changers.

Press the **[SRC]** button and select the CD changer mode to start play. If 2 CD changers are connected, press the **[SRC]** button to select the CD changer for play.

- \* If “**NO MAGAZINE**” appears in the display, insert the magazine into the CD changer. “**DISC CHECK**” appears in the display while the player loads (checks) the magazine.
- \* If “**NO DISC**” appears in the display, eject the magazine and insert discs into each slot. Then, reinsert the magazine back into the CD changer.

### Note:

- Some CDs recorded in CD-R/CD-RW mode may not be usable.

### CAUTION


**CD-ROM discs cannot be played from every CD changer, it's depended on the model.**

### Displaying CD titles

This unit can display title data for CD-text CDs and user titles input with this unit.

- \* Title data for CD-text CDs can be displayed with this unit only when it is connected to CDC655Tz.

1. Press the **[D]** button to display the title.
2. Each time you press the **[T]** button, the title display changes in the following order:

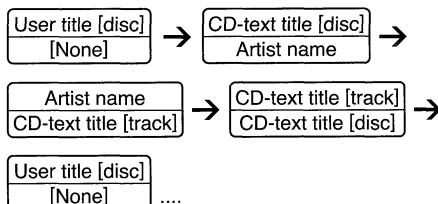

### Notes:

- If the CD playing is not a CD-text CD or no user title has been input, “**NO TITLE**” appears in the display.
- If a CD-text CD is not input its disc title or a track title, “**NO TITLE**” or “**NO TITLE**” appears in the display.

### Procedure to scroll a title

Set “**AUTO SCROLL**” to “**ON**” or “**OFF**”.

(The factory default setting is “**ON**”. Refer to the subsection “**Turning the screen saver function on or off**” in section “**Operation common to each mode**”.)

#### • When set to “ON”

The title is automatically kept scrolling.

#### • When set to “OFF”

To scroll just 1 time when the title was changed or the **[T]** button was pressed for 1 second or longer.

### Selecting a CD

Press the **[UP]** or **[DN]** button to select the desired disc.

- \* If a CD is not loaded in a slot of magazine, pressing the **[UP]** or **[DN]** button can not work.

## CD Changer Operations

### Other various play functions

#### ● Disc scan play

Disc scan play locates and plays the first 10 seconds of the first track on each disc in the currently selected CD changer. This function continues automatically until it is cancelled.

- \* Disc scan play is useful when you want to select a desired CD.

1. Press and hold the **[SCN]** button for 1 second or longer. "**D.SCN**" appears in the display and disc scan play starts.

#### ● Disc repeat play

After all the tracks on the current disc have been played, disc repeat play automatically replays the current disc over from the first track.

This function continues automatically until it is cancelled.

1. Press and hold the **[RPT]** button for 1 second or longer. "**D.RPT**" appears in the display and disc repeat play starts.

#### ● Disc random play

The disc random play selects and plays individual tracks or discs automatically in no particular order.

This function continues automatically until it is cancelled.

1. Press and hold the **[RDM]** button for 1 second or longer. "**D.RDM**" appears in the display and disc random play starts.

#### ● To cancel play

1. Press the operating button previously selected.

## TV Operations

### Note:

- The following operations are performed the same as for radio mode:

- \* **Channel selection**
- \* **Storing channels in memory**
- \* **Calling channels from memory**
- \* **Auto store**
- \* **Preset scan**

See "Radio Mode Operations" (page 15-16) for details.

### TV tuner functions

When an optional TV tuner is connected through the CeNET cable, this unit controls all TV tuner functions. To watch TV requires a TV tuner and monitor.

### Watching a TV

1. Press the **[SRC]** button and select the TV mode.
2. Press the **[BND]** button to select the desired TV band (TV1 or TV2). Each time the button is pressed, the input selection toggles between TV1 and TV2.
3. Press the **[◀▶]** lever upward or downward to tune in the desired TV station.

### Watching a video

The TV tuner has a VTR input terminal to which 1 external device can be connected. Connect a 12 V video cassette player (VCP) or videocassette recorder (VCR) to the TV tuner input terminal.

1. Press and hold the **[ADJ]** button for 1 second or longer to select VTR.
2. To return to the TV broadcast, press and hold the **[ADJ]** button for 1 second or longer.

### Setting the TV diver

You can change the reception setting for the TV antenna connected to the TV tuner.

1. Press the **[ADJ]** button to switch to the adjustment selection display.
2. Press the **[◀▶]** lever upward or downward to select "**TV DIVER**".
3. Turn the **[ROTARY]** knob clockwise to set to "**ON**" or counterclockwise to set to "**OFF**".

## TV Operations

---

- **ON:**

Sets the diver setting to ON.

- **OFF:**

Sets the diver setting to OFF.

4. Press the **[ADJ]** button to return to the previous mode.

# 10. TROUBLESHOOTING

	Problem	Cause	Measure
General	Power does not turn on. (No sound is produced)	Fuse is blown.	Replace with a fuse of the same amperage. If the fuse blows again, consult your store of purchase.
		Incorrect wiring.	Consult your store of purchase.
	No sound output when operating the unit with amplifiers or power antenna attached.	Power antenna lead is shorted to ground or excessive current is required for remote-on the amplifiers or power antenna.	<ol style="list-style-type: none"> <li>1. Turn the unit off.</li> <li>2. Remove all wires attached to the power antenna lead. Check each wire for a possible short to ground using an ohm meter.</li> <li>3. Turn the unit back on.</li> <li>4. Reconnect each amplifier remote wire to the power antenna lead one by one. If the amplifiers turn off before all wires are attached, use an external relay to provide remote-on voltage (excessive current required).</li> </ol>
	Nothing happens when button are pressed. Display is not accurate.	The microprocessor has malfunctioned due to noise, etc.	Turn off the power, then press the [OPEN] button and remove the DCP. Press the reset button for about 2 seconds with a thin rod.
		DCP or main unit connectors are dirty.	Wipe the dirt off with a soft cloth moistened with cleaning alcohol.
	No sound heard.	The speaker protection circuit is operating.	<ol style="list-style-type: none"> <li>1. Turn down sound volume. Function can also be restored by turning the power off and on again. (Speaker volume is reduced automatically when the speaker protection circuit operates).</li> <li>2. If the sound is muted again, consult our service department.</li> </ol>

	Problem	Cause	Measure
CD/MP3/WMA	No sound heard.	MP3/WMA files are absent in a disc.	Write MP3/WMA files onto the disc properly.
		Files are not recognized as an MP3/WMA file.	Use MP3/WMA files encoded properly.
		File system is not correct.	Use ISO9660 level 1, 2 or JOLIET or Romeo file system.
	Sound skips or is noisy.	Disc is dirty.	Clean the disc with a soft cloth.
		Disc is heavily scratched or warped.	Replace with a disc with no scratches.
	Sound is cut or skipped. Noise is generated or noise is mixed with sound.	MP3/WMA files are not encoded properly.	Use MP3/WMA files encoded properly.
	Sound is bad directly after power is turned on.	Water droplets may form on the internal lens when the car is parked in a humid place.	Let dry for about 1 hour with the power on.
	Wrong filename	File system is not correct.	Use ISO9660 level 1, 2 or JOLIET or Romeo file system.

# 11. ERROR DISPLAYS

	Error Display	Cause	Measure
CD/MP3/WMA	ERROR 2	A DISC is caught inside the CD deck and is not ejected.	This is a failure of CD deck's mechanism and consult your store of purchase.
	ERROR 3	A DISC cannot be played due to scratches, etc.	Replace with a non-scratched, non-warped-disc.
	ERROR 6	A DISC is loaded upside-down inside the CD deck and does not play.	Eject the disc then reload it properly.

	Error Display	Cause	Measure
CD Changer	ERROR 2	A CD inside the CD changer is not loaded.	This is a failure of CD changer's mechanism and consult your store of purchase.
	ERROR 3	A CD inside the CD changer cannot be played due to scratches, etc.	Replace with a non-scratched, non-warped disc.
	ERROR 6	A CD inside the CD changer cannot be played because it is loaded upside-down.	Eject the disc then reload it properly.

	Error Display	Cause	Measure
DVD Changer	ERROR 2	A DISC inside the DVD changer cannot be played.	This is a failure of DVD mechanism and consult your store of purchase.
	ERROR 3	A DISC cannot be played due to scratches, etc.	Retry or replace with a non-scratched, non-warped-disc.
	ERROR 6	A DISC inside the DVD changer cannot be played because it is loaded upside-down.	Eject the disc then reload it properly.
	ERROR P	Parental level error.	Set the correct Parental level.
	ERROR R	Region code error.	Eject the disc and replace correct region code disc.

# 12. SPECIFICATIONS

## FM tuner

Frequency Range: 87.9 MHz to 107.9 MHz  
Usable Sensitivity: 11 dBf  
50 dB Quieting Sensitivity: 17 dBf  
Alternate Channel Selectivity: 75 dB  
Stereo Separation (1 kHz): 35 dB  
Frequency Response ( $\pm 3$  dB): 30 Hz to 15 kHz

## AM tuner

Frequency Range:  
AM 530 kHz to 1710 kHz  
Usable Sensitivity: 25  $\mu$ V

## CD player

System: Compact disc audio system  
Usable Discs: Compact disc  
Frequency Response: 10 Hz to 20 kHz ( $\pm 1$  dB)  
Dynamic Range: 80 dB (1 kHz)  
Harmonic Distortion: 0.01%

## MP3


Decode Format: MPEG 1,2 and 2.5 -Layer 3  
Sampling rate (kHz): MPEG-1: 32,44,1,48  
MPEG-2: 16,22,05,24  
MPEG-2.5: 8,11,025,12  
Bit-rate (kbps): 8, 16, 24, 32, 40, 48, 56, 64,  
80, 96, 112, 128, 144, 160, 192,  
224, 256, 320, VBR  
CD-ROM Format: ISO9660 Level 1, 2, Romeo  
and Joliet  
Folder Level Limit: 8 Level  
Folder Support: 255  
File Support: 512  
Folder Name: Maximum 64 bytes  
File Name: Maximum 64 bytes

## Audio

Maximum Power Output: 208 W (52 W X 4 ch)  
Bass Control Action (100 Hz):  $\pm 14$  dB  
Treble Control Action (10 kHz):  $\pm 14$  dB  
Line Output (with A/C 1 kHz, 10 k $\Omega$ ): 1.8 V

## General

Power Supply Voltage:  
14.4 V DC (10.8 V to 15.6 V allowable), negative ground  
Current Consumption: Less than 15 A  
Speaker Impedance: 4  $\Omega$  (4  $\Omega$  to 8  $\Omega$  allowable)  
Weight: 2.42 lb. (1.1 kg)  
Dimensions:  
178 mm Width X 50 mm Height X 152 mm Depth

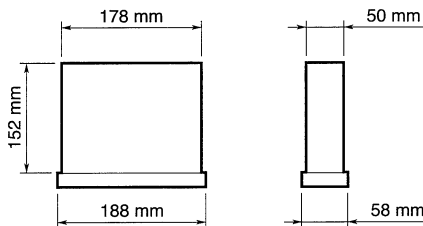

## Notes:

- Specifications comply with JEITA Standards.
- Specifications and design are subject to change without notice for further improvement.
- Please make sure when connecting external power amplifier, that you properly, to the car chassis, ground the amplifier.
- If this is not done, severe damage to the source unit may happen.



## Power Output:

19 W RMS x 4 Channels at 4  $\Omega$  and  $\leq 1\%$  THD+N

## Signal to Noise Ratio:

81 dBA (reference: 1 W into 4 $\Omega$ )

# **Clarion Co., Ltd.**

---

All Rights Reserved. Copyright © 2005: Clarion Co., Ltd.  
Printed in Malaysia / Imprimé en Malaisie / Impreso en Malasia

**PE-2799B**  
**280-8340-00**



## CAUTION

Thank you for purchasing a Clarion satellite ready source unit.

Your source unit is capable of receiving either Sirius or XM satellite radio through a satellite receiver and adapter (*if necessary*) sold separately.

Sirius Satellite Receiver : SIRCL3

XM Satellite Receiver : XMD 1000

XM Smart Digital Adapter : XM SDA

NOTE: Some Clarion 2006 source units will identify the XM Satellite Receiver and XM SDA module as "SIRIUS" and the preset satellite bands as "SR1/SR2/SR3". In this event, the "SIRIUS" logo signifies that the XM satellite radio feature has been selected on your Clarion source unit. The preset satellite bands allow you to store 6 favorite satellite stations per band, 18 in all. This can be convenient in vehicles with multiple operators, as each operator can store their own favorite stations.

For further assistance, please contact your local authorized Clarion dealer.

[www.clarion.com](http://www.clarion.com)

XM is a registered trademark of XM Satellite Radio.

SIRIUS is a registered trademark of SIRIUS Satellite Radio.



# Installation/Wire Connection Guide

## Manuel d'installation et de connexion

## Guía de instalación/conexión de cables

English

Français

Español

## 1. BEFORE STARTING / PRÉPARATIFS / ANTES DE COMENZAR

1. This set is exclusively for use in cars with a negative ground, 12 V power supply.
2. Read these instructions carefully.
3. Be sure to disconnect the battery “⊖” terminal before starting. This is to prevent short circuits during installation (Figure 1).

1. Cet appareil est exclusivement destiné à être utilisé dans les voitures avec une alimentation 12 V à masse négative.
2. Lire ces instructions attentivement.
3. S'assurer de débrancher la borne "⊖" de la batterie avant de commencer. Cela évitera les court-circuits pendant l'installation (Figure 1).

1. Esta unidad ha sido diseñada para utilizarse exclusivamente en automóviles con fuente de alimentación de 12 V, y negativo a masa.
2. Lea cuidadosamente estas instrucciones.
3. Antes de comenzar, cerciórese de desconectar el terminal “ $\ominus$ ” de la batería. Esto es para evitar cortocircuitos durante la instalación (Figura 1).

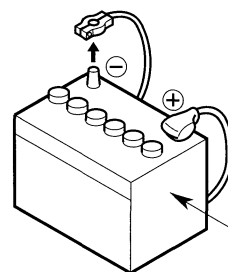


Figure 1 / Figure 1 / Figura 1

Car battery  
- Batterie de voiture  
Batería del automóvil

English

Français

Español

## 2. CAUTIONS ON INSTALLATION / PRÉCAUTIONS AU SUJET DE L'INSTALLATION / PRECAUCIONES PARA LA INSTALACIÓN

1. Prepare all articles necessary for installing the source unit before starting.
2. Install the unit within 30° of the horizontal plane (Figure 2).
3. If you have to do any work on the car body, such as drilling holes, consult your car dealer beforehand.
4. Use the enclosed screws for installation. Using other screws can cause damage (Figure 3).

1. Avant de commencer, préparer toutes les pièces nécessaires pour installer l'appareil pilote.
2. Installer l'appareil avec un angle inférieur à 30° par rapport à l'horizontal (Figure 2).
3. S'il est nécessaire d'effectuer certains travaux sur la carrosserie comme percer des trous, consulter d'abord votre concessionnaire automobile.
4. Utiliser les vis fournies pour l'installation. L'utilisation d'autres vis peut causer des dommages (Figure 3).

1. Antes de comenzar, prepare todos los elementos necesarios para instalar la unidad fuente.
2. Instale la unidad con un ángulo de 30° sobre el plano horizontal (Figura 2).
3. Si tiene que realizar cualquier trabajo en la carrocería, como taladrado de orificios, etc., consulte al proveedor de su automóvil.
4. Utilice los tornillos suministrados para la instalación. La utilización de otros tornillos podría resultar en daños (Figura 3).

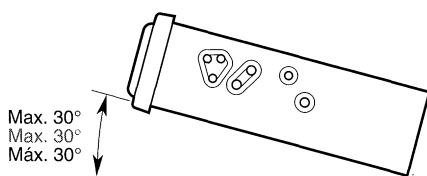


Figure 2 / Figure 2 / Figura 2


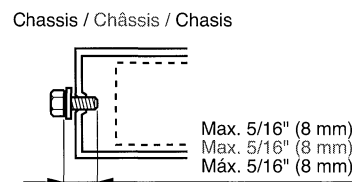


Figure 3 / Figure 3 / Figura 3

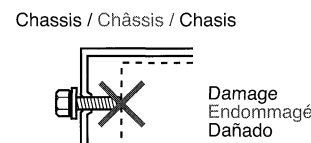

Damage  
Endommagé  
Dañado

English

Français

Español

### 3. INSTALLING THE SOURCE UNIT / INSTALLATION DE L'APPAREIL PILOTE / INSTALACIÓN DE LA UNIDAD FUENTE

■ **Universal Mount**

1. Place the universal mounting bracket into the instrument panel, use a screwdriver to bend each stopper of the universal mounting bracket inward, then secure the stopper as shown in Figure 4.
2. Wire as shown in Section 8.
3. Insert the source unit into the universal mounting bracket until it locks.
4. Mount the outer escutcheon so that all the hooks are locked.

### ■ Montage universel

1. Placer le support de montage universel dans le tableau de bord, utiliser un tournevis pour replier vers l'extérieur chaque languette du support de montage universel, puis fixer les languettes comme montré sur la Figure 4.
2. Câbler comme montré dans la Section 8.
3. Insérer l'appareil pilote dans le support de montage universel jusqu'à ce qu'il soit bloqué.
4. Monter l'écusson extérieur de manière que tous les crochets soient verrouillés.

### ■ Montaje universal

1. Coloque el soporte de montaje universal en el tablero de instrumentos, utilice un destornillador para doblar cada retén del soporte de montaje universal hacia adentro, y después asegure el retén como se muestra en la Figura 4.
2. Conecte los cables como se muestra en la Sección 8.
3. Inserte la unidad fuente en el soporte de montaje universal hasta que quede enganchado.
4. Inserte la pieza ornamental exterior en el soporte de montaje universal hasta que quede enganchado.

**Notes:**

- 1) Some car models require special mounting kits for proper installation. Consult your Clarion dealer for details.
- 2) Fasten the front stopper securely to prevent the source unit from coming loose.

**Remarques:**

- 1) Certains modèles de voiture nécessitent un kit de montage spécial pour une installation correcte. Consulter le revendeur Clarion pour les détails.
- 2) Serrer fermement la languette avant pour éviter que l'appareil pilote ne se desserre.

**Notas:**

- 1) Algunos modelos de automóviles requieren juegos de montaje especiales para realizar la instalación apropiada. Solicite los detalles a su proveedor Clarion.
- 2) Apriete con seguridad el retén frontal para evitar que se afloje la unidad fuente.

- Console opening dimensions
- Dimensions d'ouverture de la console
- Dimensiones de la abertura de la consola

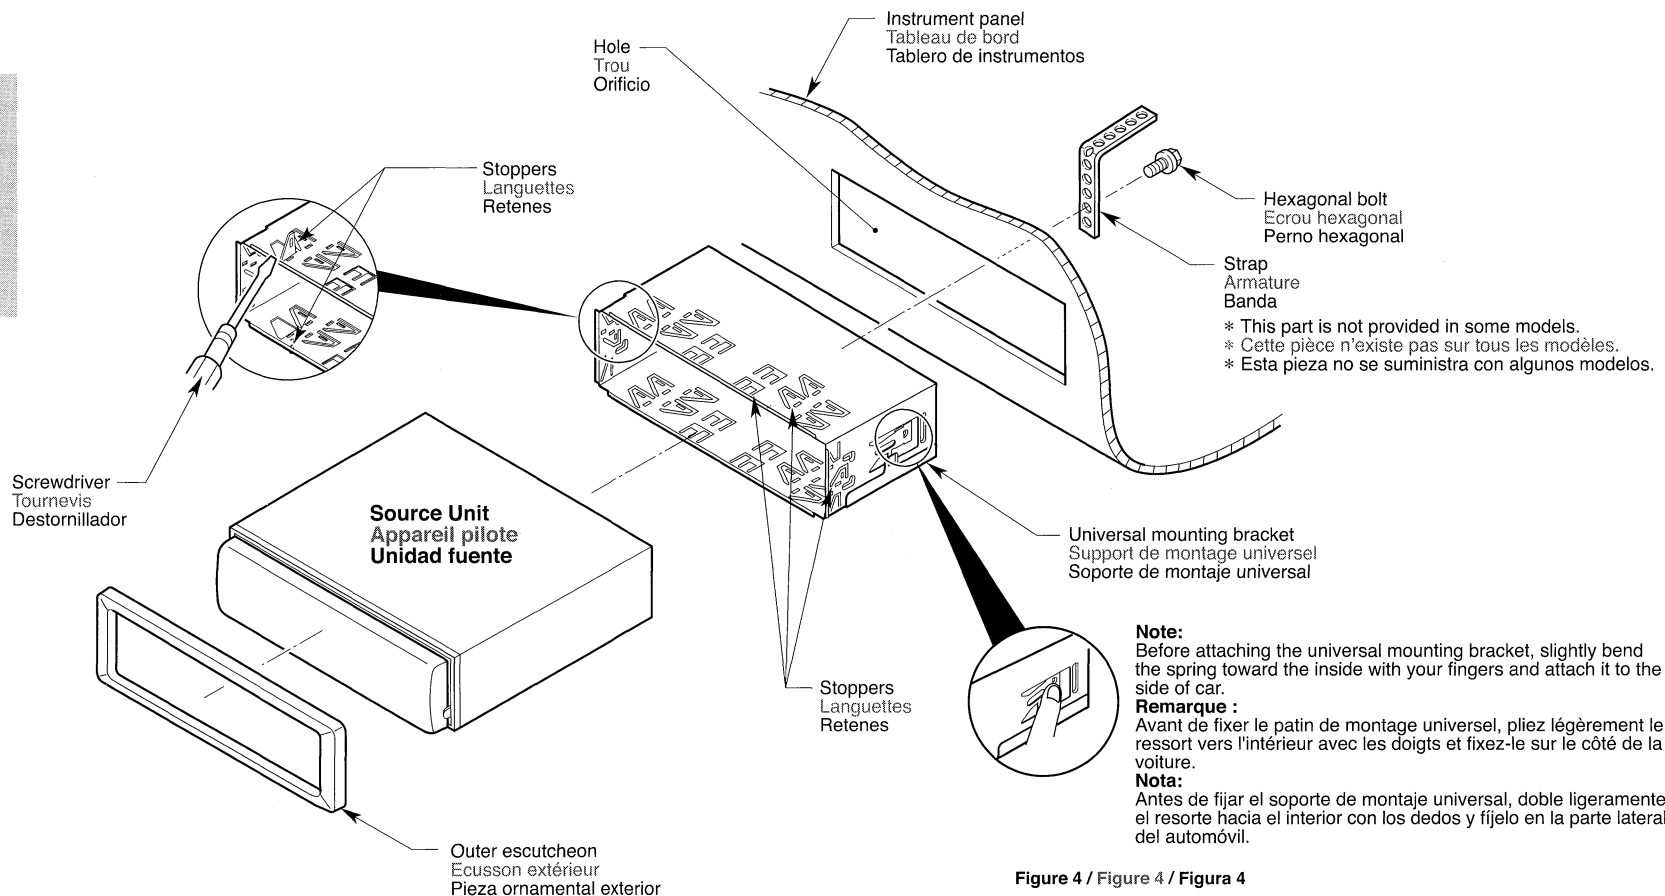
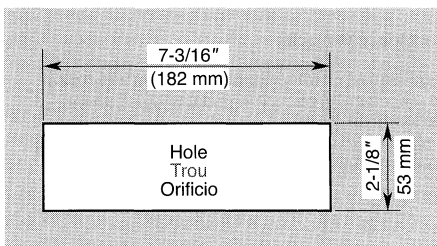


Figure 4 / Figure 4 / Figura 4

**Outer escutcheon side view**  
**Vue latérale de l'écusson extérieur**  
**Vista lateral de la pieza ornamental exterior**

■ **Fixed Mount**  
(TOYOTA, NISSAN and other ISO/DIN equipped vehicles)

This unit is designed for fixed installation in the dashboard. If the vehicle is equipped with a factory-installed radio, install the source unit with the parts and screws marked (\*) (Figure 7). If the vehicle is not equipped with a factory-installed radio, obtain an installation kit to install the source unit in the following procedure.

Bend the stopper following the procedures below when this source unit is installed to the TOYOTA, NISSAN and other ISO/DIN equipped vehicles.

1. Bend the stopper from the source unit. (Figure 5, 6)

■ **Montage fixe**  
(TOYOTA, NISSAN et autres véhicules équipés ISO/DIN)

Cet appareil est conçu pour une installation fixe dans le tableau de bord. Si le véhicule est équipé d'un auto-radio installé à l'usine, installer l'appareil pilote avec les pièces et les écrous marquées de (\*) (Figure 7). Si le véhicule n'est pas équipé d'un auto-radio installé à l'usine se procurer un kit d'installation pur installer l'appareil pilote avec la procédure suivante.

Coubez la butée après les opérations ci-dessous lorsque l'appareil pilote est installé sur un véhicule TOYOTA, NISSAN et autres véhicules équipés ISO/DIN.


1. Coubez la butée de l'appareil source. (Figure 5, 6)

■ **Montaje fijo**  
(Automóviles TOYOTA, NISSAN, y otros provistos de normas ISO/DIN)

Esta unidad ha sido diseñada para instalarse de forma fija en el tablero de instrumentos. Si el automóvil dispone de una radio instalada en fábrica, instale la unidad fuente con las piezas y los tornillos marcados con (\*) en la Figura 7. Si el automóvil no dispone de una radio instalada en fábrica, adquiera un juego de instalación para instalar la unidad fuente de acuerdo con el procedimiento siguiente.

Doble de instalar esta unidad en vehículos TOYOTA, NISSAN, y otros equipados con ISO/DIN, extraiga el retén siguiendo los procedimientos indicados a continuación.


1. Doble el retén procedente de la unidad fuente. (Figura 5, 6)

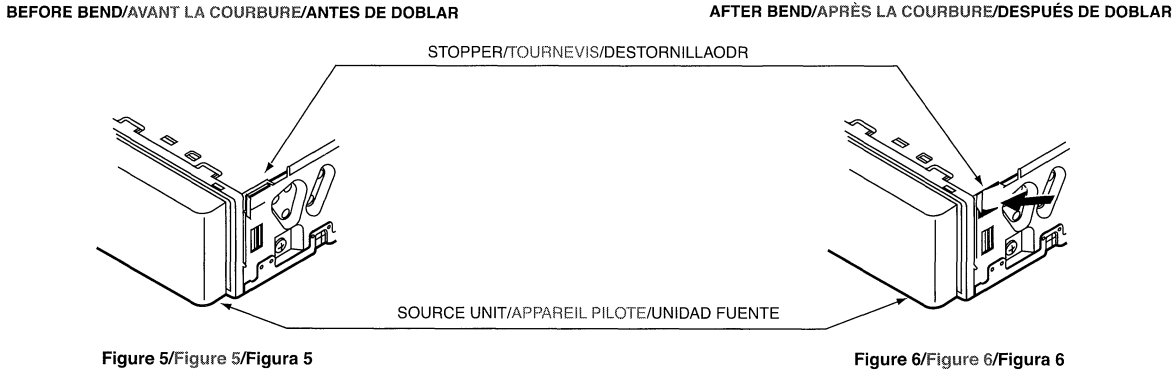

2. Secure the mounting brackets to the chassis as shown in Figure 7. Holes are pre-tapped for TOYOTA and NISSAN vehicles; modification, such as drilling new holes, of the mounting brackets may be required for other models.
3. Wire as shown in Section 8.
4. Secure the unit in the dashboard, and then reassemble the dashboard and the center panel.

2. Fixer le support de montage sur le châssis comme montré sur la Figure 7. Les trous sont pré-découpés pour les véhicules TOYOTA et NISSAN; des modification du support de montage, comme le perçage de nouveaux trous, peuvent être nécessaire pour les autres modèles.
3. Câbler comme montré dans la Section 8.
4. Fixer l'appareil dans le tableau de bord puis remonter le tableau de bord et le panneau central.

2. Asegure los soportes de montaje al chasis como se muestra en la Figura 7. Los orificios ya han sido taladrados en los automóviles TOYOTA y NISSAN, pero para otros modelos puede resultar necesario realizar modificaciones, como taladrado de nuevos orificios en los soportes de montaje.
3. Conecte los cables como se muestra en la Sección 8.
4. Asegure la unidad al tablero de instrumentos, y después vuelva a montar el tablero de instrumentos y el panel central.

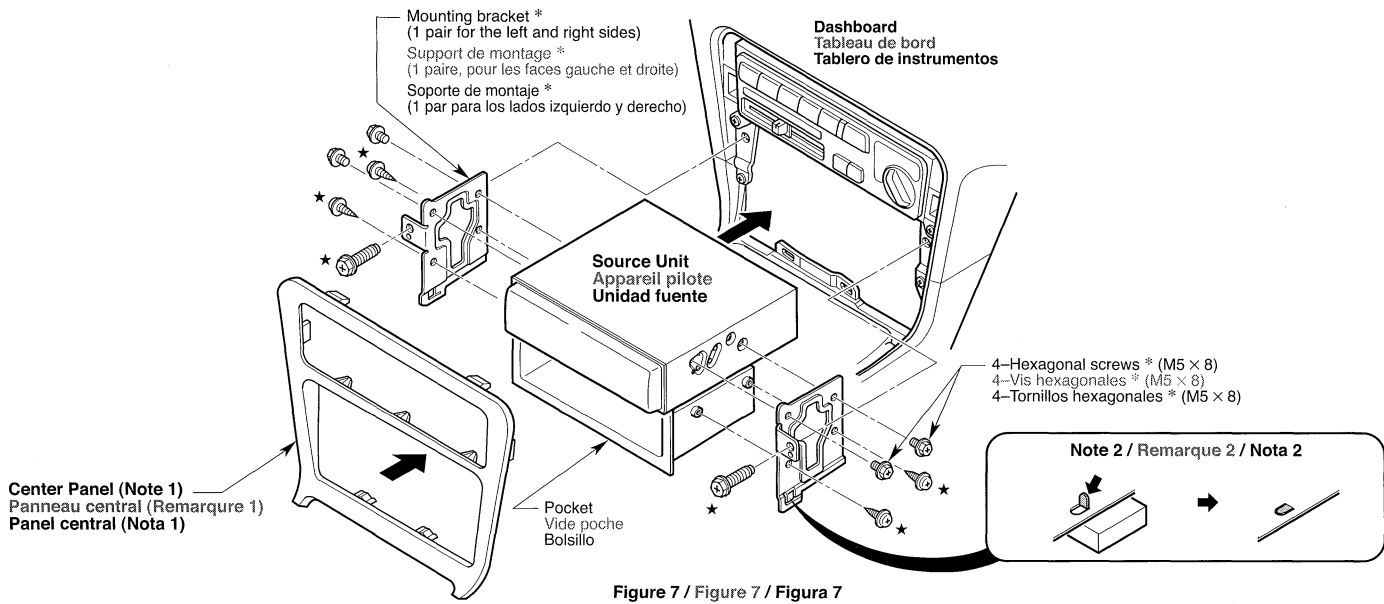

\*: The parts and screws with this mark are used to install radio or included in the installation kit.  
★: The screws with this mark are originally attached to the vehicle.

**Note 1:** In some cases, the center panel may require some modification (trimming, filling, etc.).

**Note 2:** If a hook on the installation bracket interferes with the unit, bend and flatten it with a nipper or a similar tool.

\*: Les pièces et les vis portant cette marque sont utilisées pour l'autoradio installé ou fournies dans le kit d'installation.  
★: Les vis portant cette marque sont fournies d'origine avec le véhicule.

**Remarque 2:** Dans certains cas, le panneau central peut nécessiter certaines modifications (ébarbage, remplissage, etc.).

**Remarque 2:** Si un crochet du support d'installation interfère avec l'appareil, le tordre et l'aplatir avec une pince ou un outil similaire.

\*: Las piezas y tornillos con esta marca se utilizan para instalar la radio o se suministran con el juego de instalación.  
★: Los tornillos con esta marca están originalmente fijados a los automóviles.

**Nota 1:** En algunos casos, el panel central puede requerir ciertas modificaciones (recorte, limado, etc.).

**Nota 2:** Si algún gancho del soporte de montaje interfiere con la unidad, dóblelo y aplánelo con unos alicates u otra herramienta similar.



English   Français   Español

## 4. REMOVAL OF THE SOURCE UNIT / DEPOSE DE L'APPAREIL PILOTE / DESMONTAJE DE LA UNIDAD FUENTE

1. When removing the source unit, disassemble it in the reverse of the order in Section "3. INSTALLING THE SOURCE UNIT".
2. Press the outer escutcheon upward and remove it (Figure 8).
3. Insert and lock the hook plates (Figure 9).
4. Pull the hook plates to remove the source unit.

1. Lors de la dépose de l'appareil pilote, démonter dans l'ordre inverse de la Section "3. INSTALLATION DE L'APPAREIL PILOTE".
2. Presser l'écusson extérieur vers le haut et le retirer (Figure 8).
3. Insérer et verrouiller les plaques à crochet (Figure 9).
4. Tirer sur les plaques à crochet pour retirer l'appareil pilote.

1. Para desmontar la unidad fuente, realice el procedimiento inverso al de la Sección "3. INSTALACIÓN DE LA UNIDAD FUENTE".
2. Presione la pieza ornamental exterior hacia afuera y extráigala (Figura 8).
3. Inserte y bloquee las placas de enganche (Figura 9).
4. Tire de las placas de enganche para extraer la unidad fuente.

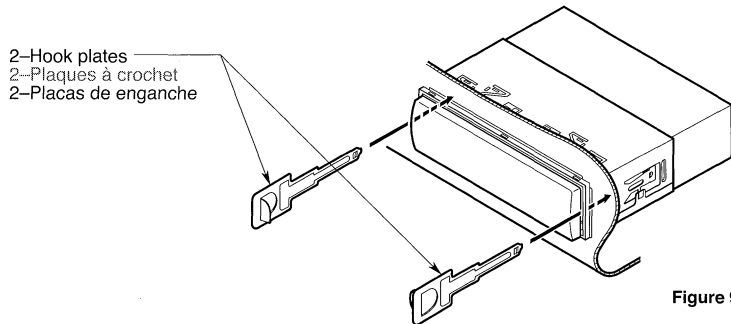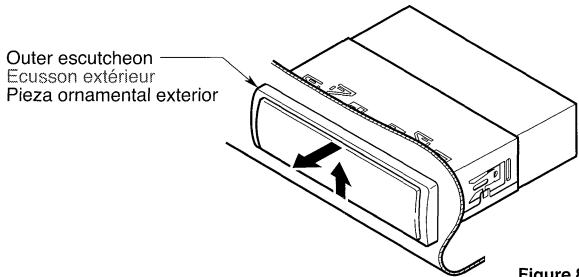

## 5. CAUTIONS ON WIRING / PRÉCAUTIONS AU SUJET DES CONNEXIONS / PRECAUCIONES PARA LA CONEXIÓN DE CABLES

1. Be sure to turn the power off when wiring.

2. Be particularly careful where you route the wires. Keep them well away from the engine, exhaust pipe, etc. Heat may damage the wires.

3. If the fuse should blow, check that the wiring is correct. If it is, replace the fuse with a new one with the same amperage rating as the original one.

4. To replace the fuse, open the lock on the source unit side, remove the old fuse and insert the new one. (Figure 10)  
\* There are various types of fuse cases. Do not let the battery side terminal touch other metal parts.

1. S'assurer de mettre l'appareil hors circuit avant de faire le câblage.

2. Faire particulièrement attention lors de l'acheminement des fils. Les éloigner du moteur, des tuyaux d'échappement, etc. La chaleur risque d'endommager ces fils.

3. Si le fusible saute, vérifier si le câblage est correct. Si le fusible est grillé, le remplacer par un fusible neuf de même ampérage que le fusible d'origine.

4. Pour remplacer le fusible, ouvrir le loquet sur le côté de l'appareil pilote, retirer l'ancien fusible et insérer le fusible neuf. (Figure 10)  
\* Il existe plusieurs types de boîtiers à fusibles. Ne pas laisser la borne de batterie entrer en contact avec les autres pièces métalliques.

1. Antes de hacer las conexiones, asegúrese de desconectar la alimentación de la unidad.

2. Sea especialmente cuidadoso al dirigir y fijar los cables. manténgalos alejados del motor, tubo de escape, etc. El calor puede dañar los cables.

3. Si el fusible se quema, revise las conexiones. Si está quemado, reemplace el fusible por otro nuevo con el mismo valor de amperaje que el original.

4. Para reemplazar el fusible, abra la tapa de la unidad fuente, retire el fusible antiguo e instale otro nuevo. (Figura 10)  
\* Existen distintos tipos de cajas de fusibles. no permita que el terminal del lado de la batería quede en contacto con otras partes metálicas.

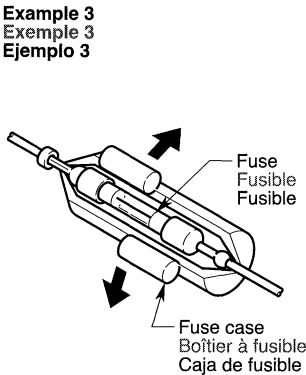
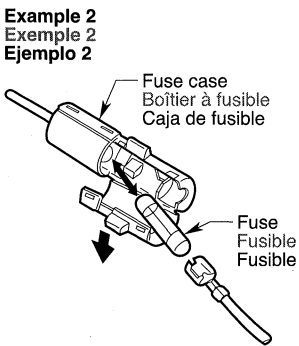
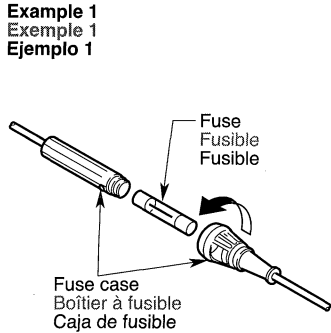


Figure 10 / Figure10 / Figura 10

## 6. GENERAL CAUTIONS / PRÉCAUTIONS GÉNÉRALES / PRECAUCIONES GENERALES

1. Do not open the case. There are no user serviceable parts inside. If you drop anything into the unit during installation, consult your dealer or an authorized CLARION service center.

2. Use a soft, dry cloth to clean the case. Never use hard cloth, thinner, benzen, alcohol, etc. For tough dirt, apply a little cold or warm water to a soft cloth and wipe off the dirt gentry.

1. Ne pas ouvrir le coffret. Il n'y a pas de pièces réparables par l'utilisateur à l'intérieur de l'appareil. Si un objet est tombé dans l'appareil pendant l'installation, consulter votre revendeur ou un service après-vente agréé CLARION.

2. Utiliser un chiffon doux et sec pour nettoyer le coffret, ne jamais utiliser un chiffon rigide, un diluant, du benzène, de l'alcool, etc. Pour enlever la saleté tenace, appliquer un peu d'eau froide ou tiède sur un chiffon doux et essuyer doucement la saleté.

1. No abra la caja. En el interior no hay piezas que pueda reparar el usuario. Si dentro de la unidad entra algo durante la instalación, consulte a su proveedor o a un centro de servicio autorizado por CLARION.

2. Para limpiar la caja, utilice un paño suave y seco. no use nunca un paño duro, diluidor de pintura, benceno, alcohol, etc. Para la suciedad resistente, aplique un poco de agua fría o caliente a un paño suave y frote suavemente la parte sucia.


**IMPORTANT:**  
Improper installation may cause damage to your unit or car. If you do not have the appropriate experience, consult a qualified installer. Cutting chassis wire leads voids the warranty.

**IMPORTANT:**  
Une installation incorrecte peut endommager l'appareil ou le véhicule. Si l'on ne possède pas les connaissances requises, consulter un installateur qualifié. Couper le fil du châssis annule la garantie.

**IMPORTANTE:**  
La instalación inapropiada puede causar daños en su unidad o su automóvil. Si usted no posee la experiencia apropiada, consulte a un instalador cualificado. El corte de los conductores de puesta a masa (carrocería) anulará la garantía.

## 7. SAMPLE SYSTEMS / EXEMPLES DE SYSTÈMES / EJEMPLOS DE SISTEMAS

- Example of the system using an external ampliSer (Audio Visual)
- Exemple de système utilisant un ampliSicateur extérieur. (audio-visuel)
- Ejemplo de sistema utilizando un ampliScador externo (audiovisual)

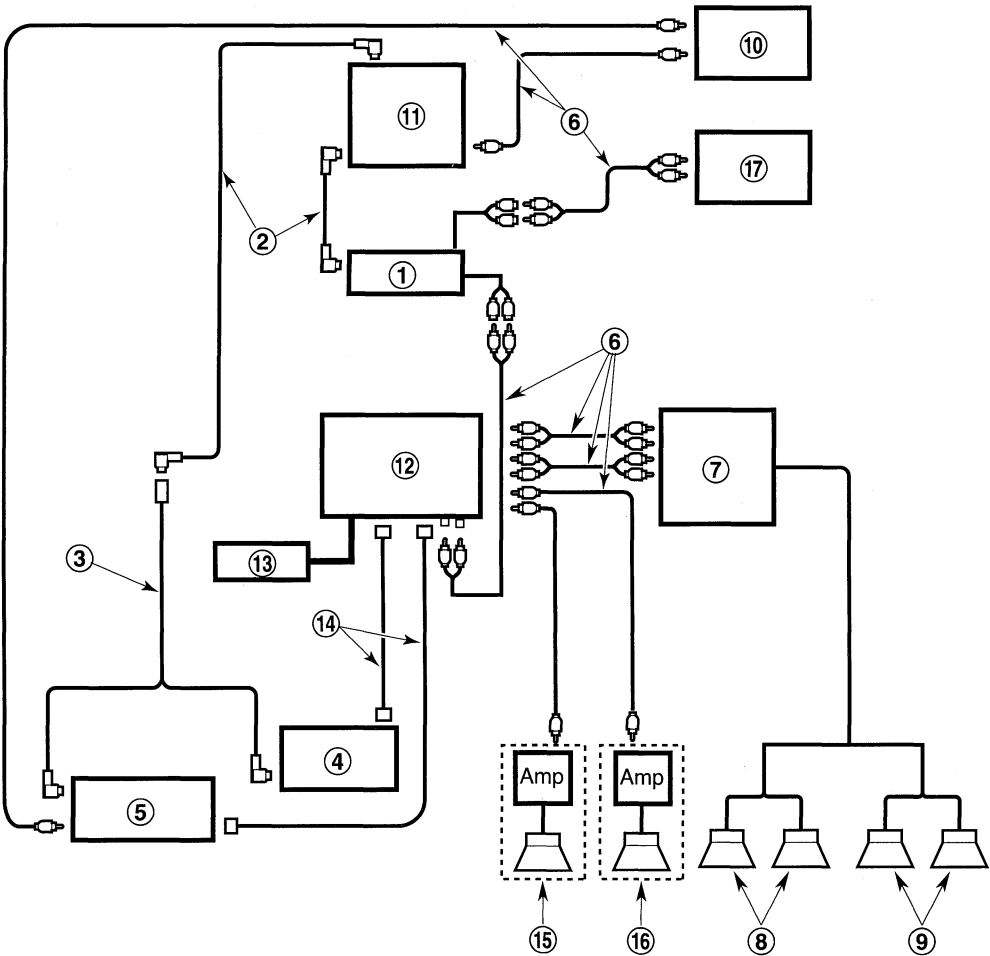

- \* This main unit can control a total of 2 changers except 2 DVD changers exist in the system.
- \* L'autoradio est capable de commander 2 changeurs au total en plus des 2 changeurs de DVD qui existent dans le système.
- \* Esta unidad principal puede controlar en total 2 cambiadores excepto los 2 cambiadores de discos DVD del sistema.

**Note:**  
Use a CeNET extension cable that is less than 20 m in length. (including the Y-adaptor CCA-519.)

**Remarque:**  
Utiliser un câble d'extension CeNET inférieur à 20 m de long (en comptant aussi l'adaptateur Y CCA-519).

**Nota:**  
Utilice un cable prolongador CeNET de menos de 20 m de longitud (incluyendo el adaptador en Y CCA-519).

### English

①	Main unit
②	CeNET extension cable
③	Y-adaptor (sold separately)
④	CD changer
⑤	DVD changer
⑥	RCA extension cable (sold separately)
⑦	4-Channel power ampliSer
⑧	Front speakers
⑨	Rear speakers
⑩	Monitor
⑪	TV tuner module
⑫	5.1ch surround decoder
⑬	5.1ch surround decoder control unit
⑭	Optical connector cable
⑮	Center speaker (with ampliSer)
⑯	Subwoofer (with ampliSer)
⑰	External unit

### Français

①	Module principal
②	Câble d'extension CeNET
③	Adaptateur Y (vendu séparément)
④	Changeur de CD
⑤	Changeur de DVD
⑥	Câble de rallonge RCA (vendu séparément)
⑦	Amplificateur de puissance 4 canaux
⑧	Haut-parleurs avant
⑨	Haut-parleurs arrière
⑩	Moniteur
⑪	Module tuner TV
⑫	Décodeur surround 5.1 canaux
⑬	Module de commande de décodeur surround 5.1 canaux
⑭	Câble de connexion optique
⑮	Haut-parleur central (avec ampliSicateur)
⑯	Subwoofer (avec ampliSicateur)
⑰	Appareil externe

### Español

①	Unidad principal
②	Cable prolongador CeNET
③	Adaptador en Y (vendido aparte)
④	Cambiador de discos compactos
⑤	Cambiador de DVD
⑥	Cable de extensión RCA
⑦	AmpliScador de potencia de 4 canales
⑧	Altavoces delanteros
⑨	Altavoces traseros
⑩	Monitor
⑪	Módulo sintonizador de televisión
⑫	DescodiScador de 5.1ch surround
⑬	Unidad de control de DescodiScador de 5.1ch surround
⑭	Cable conector óptico
⑮	Altavoz central (con ampliScador)
⑯	Altavoz de subgraves (con ampliScador)
⑰	Unidad externo

# 8. WIRE CONNECTIONS / CONNECTIQUE / CONEXIÓN DE CABLES

■ Rear Layout  
■ Disposition arrière  
■ Disposición trasera

English


No.	Description
①	FRONT RIGHT Grey (Red)
②	FRONT LEFT Grey (White)
③	REAR RIGHT Black (Red)
④	REAR LEFT Black (White)
⑤	AUX INPUT RIGHT Red (Red)
⑥	AUX INPUT LEFT Red (White)

Français

No.	Description
①	AVANT DROIT Gris (Rouge)
②	AVANT GAUCHE Gris (Blanc)
③	ARRIERE DROIT Noir(Rouge)
④	ARRIERE GAUCHE Noir (Blanc)
⑤	ENTREE AUX droite (Rouge)
⑥	ENTREE AUX gauche (Blanc)

Español

No.	Descripción
①	DELANTERO DERECHO Gris (Rojo)
②	DELANTERO IZQUIERDA Gris (Blanco)
③	TRASERO DERECHO Negro (Rojo)
④	TRASERO IZQUIERDA Negro (Blanco)
⑤	Entrada auxiliar (AUX INPUT) del canal derecho (Rojo)
⑥	Entrada auxiliar (AUX INPUT) del canal izquierdo (Blanco)

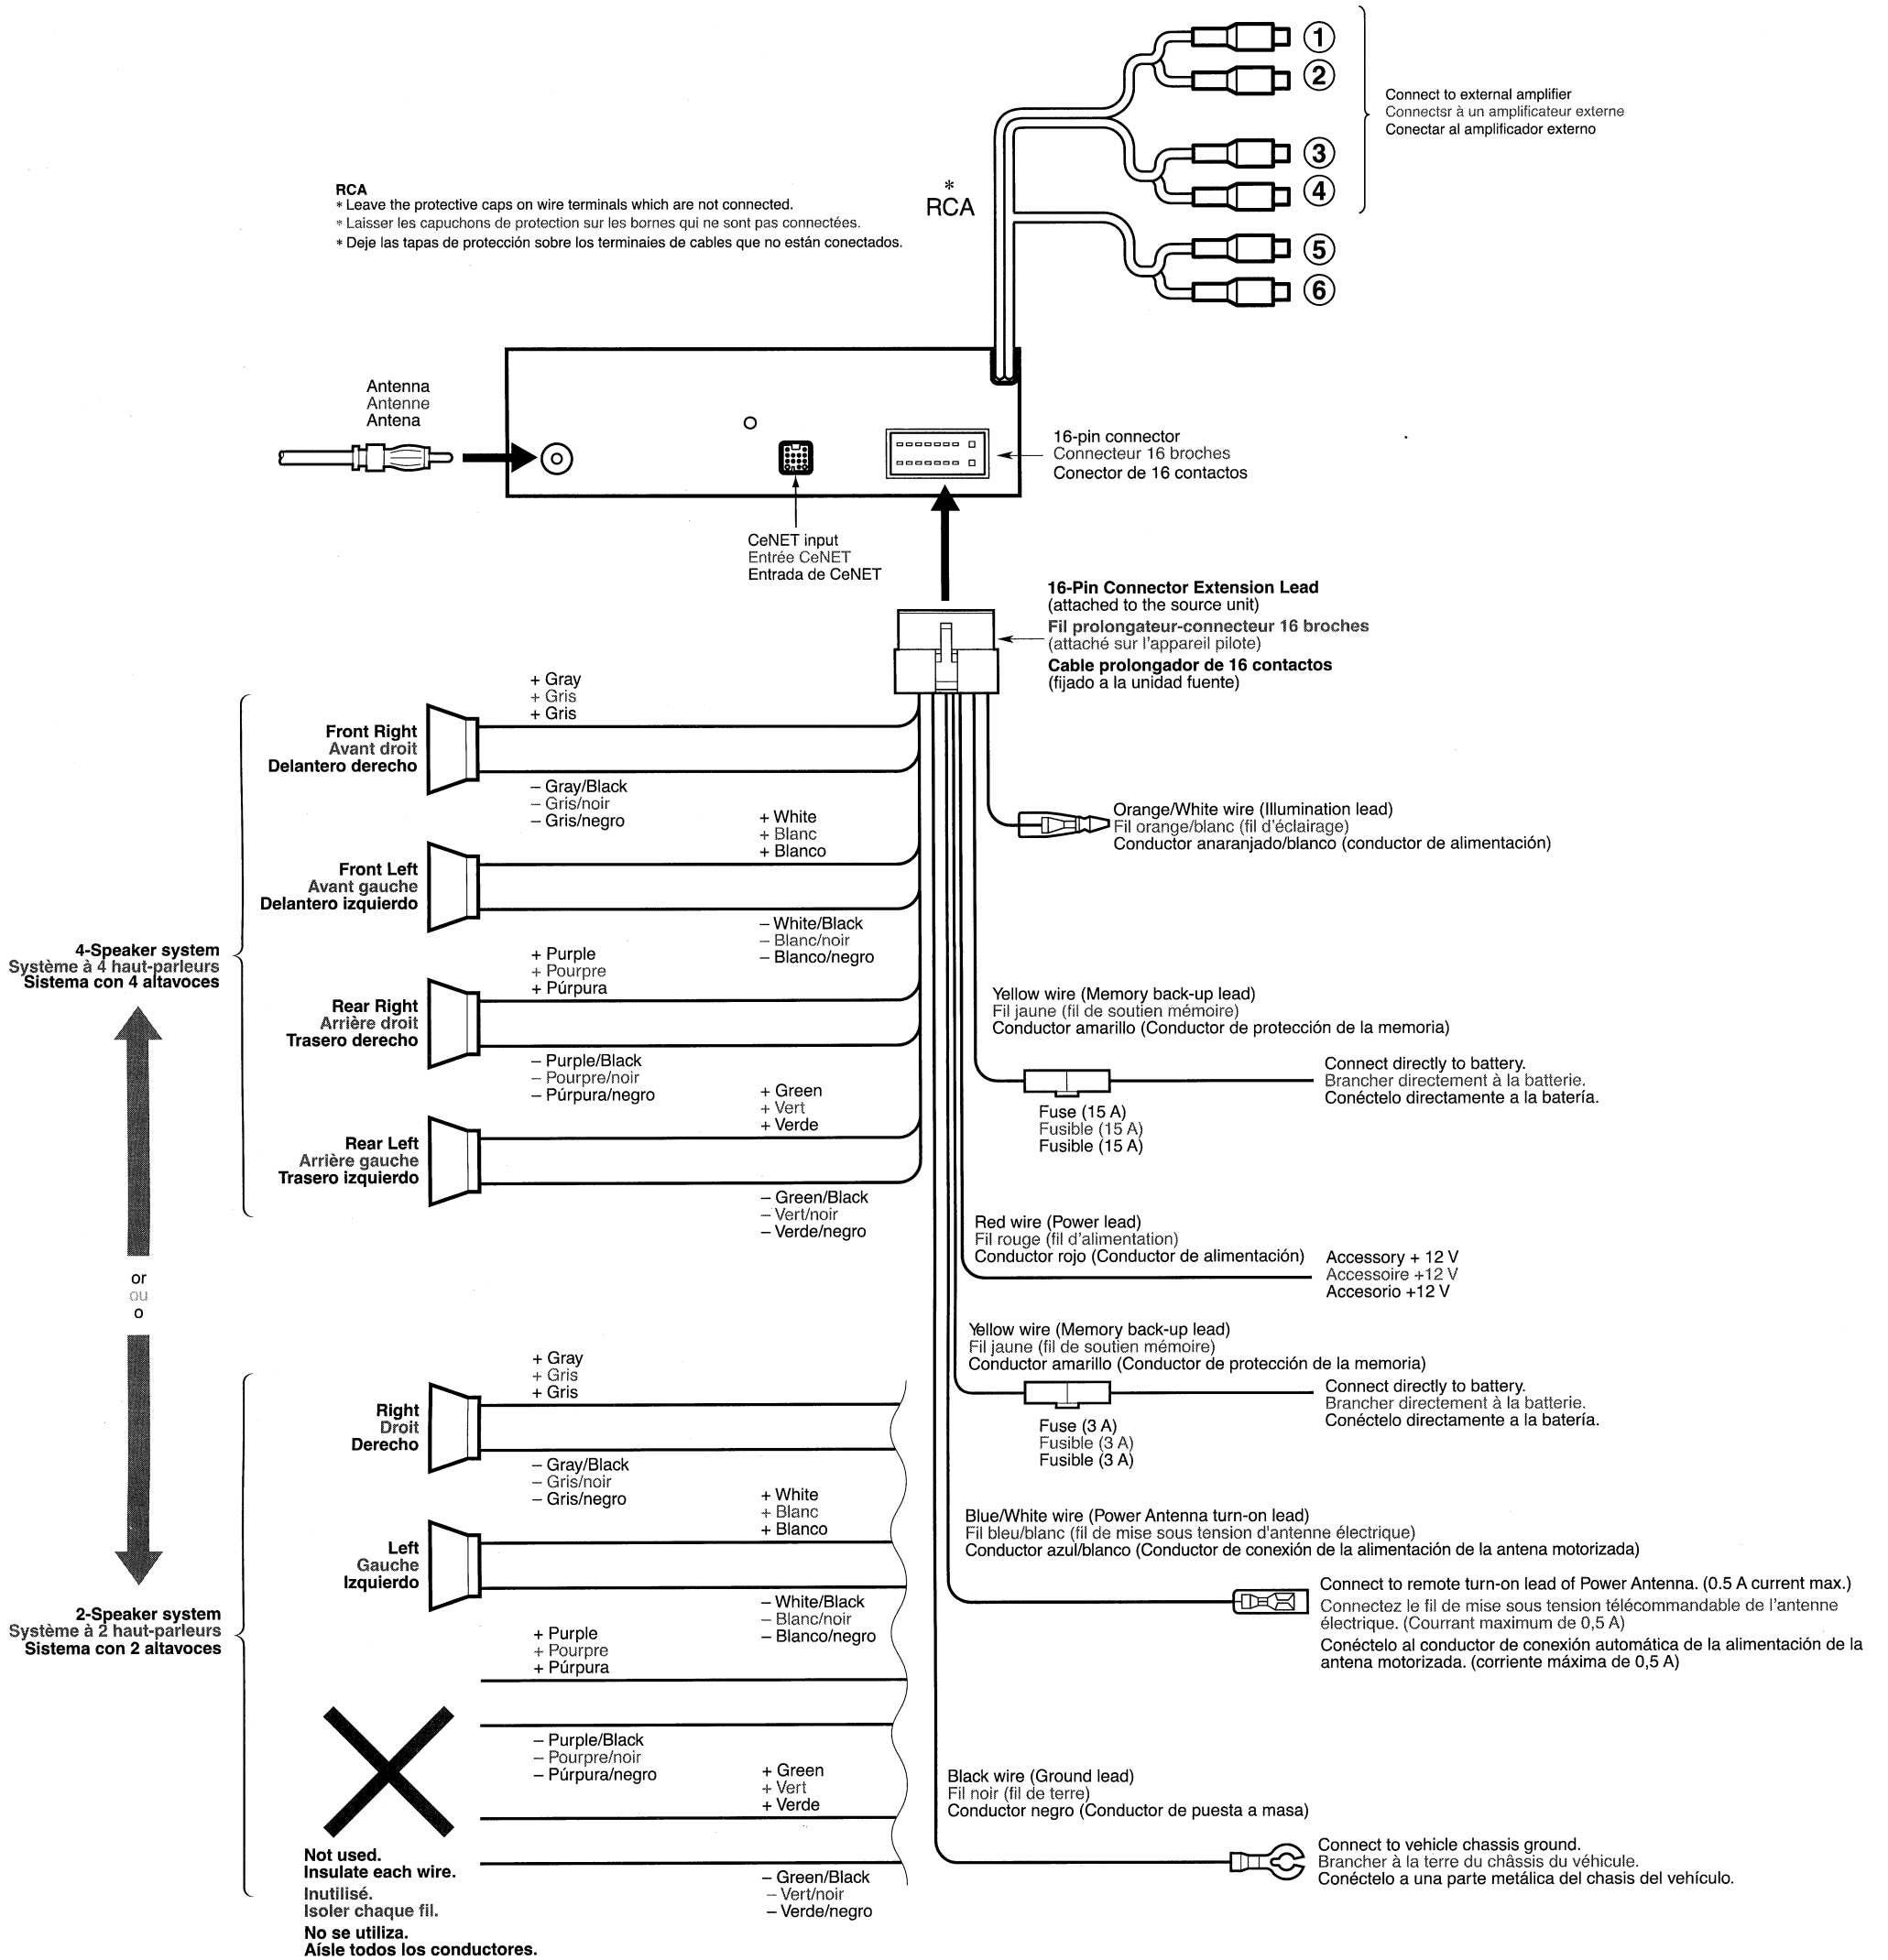

**clarion®****CLARION 2006 LIMITED WARRANTY**

For USA and Canada only

Except as noted, Clarion products purchased from an authorized Clarion dealer are warranted against all defects in materials and workmanship for a period of one (1) year from the date of original purchase.

The following Clarion products noted below \*\* are warranted against all defects in materials and workmanship for a two (2) year period from the date of original purchase when purchased from **AND** installed by an authorized Clarion dealer.

\*\* DRZ9255 DXZ865MP DXZ765MP DXZ665MP DXZ465MP DFZ675MC DPX11500 DPX1800 DPX2250

All Clarion cables, wires and other accessories if purchased from an authorized Clarion dealer are warranted against all defects in materials and workmanship for ninety (90) days from the date of original purchase.

**ALL PURCHASES OF CLARION PRODUCTS FROM NON-AUTHORIZED CLARION DEALERS ARE SUBJECT TO FURTHER WARRANTY RESTRICTIONS AS DESCRIBED BELOW.**

The conditions of this Limited Warranty and the extent of responsibility of Clarion Corporation of America ("Clarion") under this Limited Warranty are as follows:

- 1. PROOF OF DATE OF PURCHASE FROM AN AUTHORIZED CLARION DEALER WILL BE REQUIRED FOR WARRANTY SERVICE OF THIS PRODUCT. IN THE CASE OF THE TWO (2) YEAR LIMITED WARRANTY FOR THE CLARION PRODUCTS NOTED ABOVE, PROOF OF DATE OF PURCHASE AND PROOF OF INSTALLATION BY AN AUTHORIZED CLARION DEALER IS REQUIRED. INFORMATION ABOUT CLARION AUTHORIZED WARRANTY SERVICE CENTERS MAY BE OBTAINED BY CONTACTING CLARION AT THE ADDRESS LISTED BELOW.**
2. This Limited Warranty will become void if service performed by anyone other than an approved Clarion Warranty Service Center results in damage to the products.
3. This Limited Warranty does not apply to any product which has been subject to misuse, neglect or accident, or which has had the serial number altered, defaced or removed, or which has been connected, installed, adjusted or repaired, other than in accordance with the instructions furnished by Clarion.
4. This Limited Warranty does not cover car static or other electrical interferences, tape head or laser pick-up cleaning or adjustments, or labor costs for the removal or reinstallation of the unit for repair.
5. The sole responsibility of Clarion under this Limited Warranty shall be limited to the repair of the products or replacement of the product, at the sole discretion of Clarion.
6. Product must be shipped in its original carton or equivalent carton, fully insured, with shipping charges prepaid. Clarion will not assume any responsibility for any loss or damage incurred in shipping.
- 7. CLARION PRODUCTS PURCHASED FROM A SOURCE OTHER THAN AN AUTHORIZED CLARION DEALER, INCLUDING ANY AND ALL PURCHASES VIA THE INTERNET FROM A NON INTERNET AUTHORIZED CLARION DEALER, SHALL NOT BE COVERED BY ANY CLARION LIMITED WARRANTY TO THE EXTENT ALLOWED BY APPLICABLE LAW. IN THE EVENT AND TO THE EXTENT APPLICABLE LAW PROHIBITS ELIMINATION OF WARRANTIES UNDER THESE CIRCUMSTANCES, THE APPLICABLE LIMITED WARRANTY PERIOD SHALL BE DEEMED TO BE FIFTEEN (15) DAYS FROM THE DATE OF ORIGINAL PURCHASE.**
- 8. ALL IMPLIED WARRANTIES EXCEPT TO THE EXTENT PROHIBITED BY APPLICABLE LAW SHALL HAVE NO GREATER DURATION THAN THE WARRANTY PERIOD SET FORTH ABOVE. UNDER NO CIRCUMSTANCES SHALL CLARION BE LIABLE FOR ANY LOSS OR DAMAGE, DIRECT OR CONSEQUENTIAL, ARISING OUT OF THE USE OR INABILITY TO USE THE PRODUCT. BECAUSE SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR EXCLUSIONS OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGES, THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.**
- 9. THIS LIMITED WARRANTY GIVES YOU SPECIFIC LEGAL RIGHTS, AND YOU MAY ALSO HAVE OTHER RIGHTS WHICH VARY FROM STATE TO STATE.**
10. The laws of the State of California shall govern and control this limited warranty, its interpretation and enforcement.
11. Should you have any difficulties with the performance of this product during the warranty period, please call Clarion or visit our web site for a listing of Authorized Warranty Service Centers in your area. You may also contact the Clarion Customer Service at the address listed below for any service help you may need with Clarion products.

In USA:  
Clarion Corporation of America  
Attn: Customer Service Manager  
661 W. Redondo Beach Blvd  
Gardena, CA. 90247-4201  
1-800-GO-CLARION  
www.clarion.com

In Canada :  
Clarion Canada Inc.  
Warranty Service Center  
2239 Winston Park Drive  
Oakville, Ontario L6H 5R1  
(905) 829-4600  
www.clarioncanada.com